

INSTRUCTION AND PARTS MANUAL  
**MODEL M25**  
FREE FALL  
PLANETARY HYDRAULIC WINCH



**THE LOGICAL CHOICE**



READ THIS MANUAL BEFORE INSTALLING, OPERATING OR SERVICING THIS PRODUCT. THIS MANUAL CONTAINS IMPORTANT INFORMATION. MAKE THIS MANUAL AVAILABLE TO ALL PERSONS RESPONSIBLE FOR THE OPERATION, INSTALLATION, SERVICING AND MAINTENANCE OF THIS PRODUCT.

# PULLMASTER LIMITED WARRANTY

Effective 1/1/2002

*SUPERSEDES ALL PRIOR WARRANTIES*

Seller warrants that each article sold under this order shall at the time of shipment (i) conform to applicable specifications, and (ii) be free from defects in material and workmanship during normal and ordinary use and service (the "Warranty").

Buyer's exclusive remedy and Seller's sole obligation under this Warranty shall be, at Seller's option, to repair or replace any article or part thereof which has proven to be defective, or to refund the purchase price of such article or part thereof.

This Warranty shall expire one (1) year from the date the article is first shipped by Seller. Notice of claimed breach of this Warranty must be given by Buyer to Seller within the applicable period. Such notice shall include an explanation of the claimed warranty defect and proof of date of purchase of the article or part thereof for which warranty coverage is sought. No allowances shall be made by Seller for any transportation, labor charges, parts, "in and out" costs, adjustments or repairs, or any other work, unless such items are authorized in writing and in advance by Seller. Nor shall Seller have any obligation to repair or replace items which by their nature are expendable.

If an article is claimed to be defective in material or workmanship, or not to conform to the applicable specifications, Seller will either examine the article at Seller's site or issue shipping instructions for return to Seller. This Warranty shall not extend to any articles or parts thereof which have been installed, used, or serviced otherwise than in conformity with Seller's applicable specifications, manuals, bulletins, or instructions, or which shall have been subjected to improper installation, operation, or usage, misapplication, neglect, overloading, or employment for other than normal and ordinary use and service.

This Warranty shall not apply to any articles or parts thereof furnished by Seller to Buyer's specifications and/or furnished by Buyer or acquired from others at Buyer's request.

SELLER MAKES NO EXPRESS WARRANTIES AND NO IMPLIED WARRANTIES OF ANY KIND, OTHER THAN THE WARRANTY EXPRESSLY SET FORTH ABOVE. SUCH WARRANTY IS EXCLUSIVE AND IS MADE AND ACCEPTED IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The remedies for this Warranty shall be only those expressly set forth above, to the exclusion of any and all other remedies of whatsoever kind. The limited remedies set forth above shall be deemed exclusive, even though they may fail their essential purpose. No agreement varying or extending the foregoing Warranty, remedies, exclusions, or limitations shall be effective unless in a writing signed by an executive officer of Seller and Buyer. This Warranty is non-transferable.

Under no circumstances shall Seller be liable (i) for any damage or loss to any property other than the warranted article or part thereof, or (ii) for any special, indirect, incidental, or consequential damage or loss, even though such expenses, damages, or losses may be foreseeable.

The foregoing limitations on Seller's liability in the event of breach of warranty shall also be the absolute limit of Seller's liability in the event of Seller's negligence in manufacture, installation, or otherwise, with regard to the articles covered by this Warranty, and at the expiration of the Warranty period as above stated, all such liabilities shall terminate.



## WARNING

**PULLMASTER** planetary winches/drives are not designed for operations involving lifting or moving personnel. The **PULLMASTER WINCH CORPORATION** cannot be held liable or responsible for any accident resulting from such use of **PULLMASTER** planetary winches/drives.

**Note:** Specifications contained in this Instruction and Parts Manual are subject to change without notice.

# SAFETY RECOMMENDATIONS



**DANGER**

**FAILURE TO COMPLY WITH THE FOLLOWING SAFETY RECOMMENDATIONS AND LOCAL RULES AND REGULATIONS WILL RESULT IN PROPERTY DAMAGE, SEVERE INJURY OR DEATH.**



Definition: **Caution** indicates a potentially hazardous situation which, if not avoided may result in minor or moderate injury.



Definition: **Warning** indicates a potentially hazardous situation which, if not avoided could result in death or serious injury.



Definition: **Danger** indicates a potentially hazardous situation which, if not avoided will result in death or serious injury.

The planetary hydraulic winches are made for hoisting and lowering loads and to be operated by trained and professional personnel. They are not designed for operations involving lifting or moving personnel. The winches are powered by hydraulic power. The ropes / cables for hoisting operations are not supplied by PULLMASTER. The winches are always assembled in an application, they do not function as an independent machine and it is not allowed to use them as such.

The winches are to be used within the specifications as listed in the manual under "SPECIFICATIONS". Other use as foreseen in the functional description of the hydraulic winch is not allowed without written permission from PULLMASTER.

1. Do not install, operate or service winch before reading and understanding manufacturer's instructions.
2. The winch described herein is not designed for operations involving lifting or moving personnel.
3. Do not lift or carry loads over people.
4. Do not exceed recommended operating pressure (psi) and operating volume (gpm).
5. Do not jerk the winch. Always smoothly accelerate and decelerate load.
6. Do not operate a damaged, noisy or malfunctioning winch.
7. Do not leave a load suspended for any extended period of time.
8. Never leave a suspended load unattended.
9. Winch should be maintained and operated by qualified personnel.
10. Inspect winch, rigging, mounting bolts and hoses before each shift.
11. Warm-up equipment before operating winch, particularly at low ambient temperatures.
12. Verify winch function by raising and lowering a full test load to a safe height before each shift.
13. Do not weld any part of the winch.
14. Verify gear lubrication and brake circulation supply and return before operating winch.
15. Be sure of equipment stability before operating winch.
16. Wear proper clothing to avoid entanglement in rotating machinery.
17. Always stand clear of the load.
18. Use only recommended hydraulic oil and gear lubricant.
19. Keep hydraulic system clean and free from contamination at all times.
20. Maintain winch and equipment in good operating condition. Perform scheduled maintenance regularly.
21. Keep hands clear when winding wire rope onto the winch drum.
22. Do not use the wire rope as a ground for welding.
23. Rig the winch carefully. Ensure that the wire rope is properly anchored to the correct cable anchor slot at the cable drum.
24. Do not lift a load with a twisted, kinked or damaged wire rope.
25. Consult wire rope manufacturer for size, type and maintenance of wire rope.
26. Maintain five wraps of wire rope on the cable drum at all times.
27. In case of a power failure or breakdown leading to an unexpected stop of the hydraulic power circuit, stand clear of the area and the load being hoisted, take the necessary precautions to prevent access to area where the load is halted.
28. The noise level of the winch is 87dBA measured on a distance of 1.00 meter, 1.60 meters high. The measuring equipment used was: Realistic #42-3019.
29. Clean up any oil spillage immediately.
30. Wear proper clothing and personal protection equipment such as, footwear, safety goggles and a hard hat. Read manual first.



# DESCRIPTION OF THE MODEL M25 WITH FREE FALL

## GENERAL DESCRIPTION:

The PULLMASTER Model M25 with free fall is a planetary hydraulic winch having equal speed in both directions and the ability to lower a load FAST. The free fall option comes in three variations: **emergency free fall**, **controlled free fall**, or with **both combined**. The main components of this unit are:

- + Hydraulic gear motor
- + Multi disc brake with static and dynamic function
- + Over-running clutch
- + Hydraulic gear motor
- + Primary planet reduction
- + Final planet reduction
- + Brake housing
- + Cable drum
- + Free fall housing
- + Free fall clutch assembly
- + Metering pump assembly (for controlled free fall)

## FUNCTION IN FORWARD ROTATION (HOISTING):

In forward rotation, the output torque and rpm of the hydraulic motor are transmitted to the sun gear of the primary planet reduction. The output of the primary reduction is transferred to the final sun gear, which is splined to the primary planet hub. The final planet assembly is locked in place by the free fall clutch and does not rotate, so the rotation is transmitted to the cable drum by the final drive planet gears. In forward rotation, or when a load is lifted, an over-running clutch, which connects the motor drive shaft to the automatic brake assembly, permits free rotation of the sun gear, without effecting the brake. When the winch rotation is stopped, the load on the cable drum causes the over-running clutch to lock and the maximum load is held safely by the disc brake.

## FUNCTION IN REVERSE ROTATION (LOWERING):

In reverse rotation, or when the winch is pressurized for lowering of a load, hydraulic pressure from the reverse side of the hydraulic motor is channelled to the brake piston, causing the brake piston to release the multi-disc brake against a number of brake springs. The over-running clutch, connecting the motor drive shaft to the brake assembly, locks, causing the brake discs to rotate between divider plates, which are engaged into the brake housing. If the load on the cable drum tends to effect the lowering speed, the resulting pressure drop in the brake piston causes friction between the brake discs and the divider plates. In this way, a completely smooth pay out speed can be achieved in a stepless operation by modulation of the winch control handle. When the control handle is returned to neutral position, rotation stops and the disc brake applies automatically. A hydraulic counter-balance valve or holding valve is not required for smooth and positive operation of the automatic brake.

During lowering operations of the winch, the friction created by the brake discs results in heat. This heat is dissipated by the circulation of hydraulic fluid through the brake housing, supplied internally from the motor, or externally, depending on the brake code of the winch. For efficient cooling of the automatic brake, models with external circulation should be adjusted to supply 5 (US) gpm - 19 l/min. This flow must be returned directly to the reservoir with a permissible back pressure of 30 psi (2 bar).

**IMPORTANT:** Under no circumstances must the pressure in the brake housing be permitted to exceed 30 psi (2 bar). Excessive pressure in the brake housing will damage the oil seal separating the brake housing from the drum interior. Damage to this seal will cause the drum to fill up with hydraulic fluid.



**PRIOR TO OPERATION OF THIS UNIT ALWAYS ENSURE COMPLIANCE WITH ANY NATIONAL OR LOCAL SAFETY CODES AND REGULATIONS REGARDING THE USE OF FREE FALL WINCHES.**

# DESCRIPTION OF THE MODEL M25 WITH FREE FALL

CONTINUED

## EMERGENCY FREE FALL:

The **emergency free fall** is used for a full release of a suspended load up to the maximum load capacity of the Model M25 planetary winch. Upon activating the **emergency free fall** function the load will drop and must be allowed to fall to its end travel without re-engagement.



**DANGER**

**RE-ENGAGING FREE FALL CLUTCH WHILE LOAD IS DROPPING CAUSES SHOCK LOADS AND WILL LEAD TO CABLE FAILURE, PROPERTY DAMAGE, SEVERE INJURY OR DEATH. INTERLOCK HYDRAULIC CONTROL TO PREVENT RE-ENGAGING FREE FALL CLUTCH WHILE LOAD IS DROPPING.**

## FUNCTION OF THE EMERGENCY FREE FALL:

When the Model M25 planetary winch is actuated for **emergency free fall**, hydraulic pressure is channelled to the clutch piston, causing the clutch piston to press against a series of springs and release the multi-disc clutch. This effectively disconnects the cable drum from the gear train of the winch and any suspended load will drop. The minimum load required to establish the **emergency free fall** mode is 500 lb (227 kg).

## CONTROLLED FREE FALL:

The **controlled free fall** offers positive down control of a load at selected speeds and can be stopped anywhere on the way down. The **controlled free fall** is not designed, nor intended to lower the maximum load in a **controlled free fall**. The permissible load is 30% of the maximum line pull capacity of the winch. Since the clutch release pressure of the **controlled free fall** varies in accordance with the size of the load, a metering pump is utilized to compensate for clutch release pressure variations.

## FUNCTION OF CONTROLLED FREE FALL:

The **controlled free fall** has the same basic function as the **emergency free fall** with the addition of a metering pump which regulates the different clutch pressure requirements during a **controlled free fall**. When the **controlled free fall** is actuated, hydraulic pressure is channelled into the clutch piston, causing the clutch piston to press against a series of springs and release the multi-disc clutch. When the clutch has been released, the final planet assembly rotates with the cable drum, around a stationary sun gear. A small hydraulic gear pump is splined to the final planet hub. This hydraulic pump displaces hydraulic oil flow out of the free fall control circuit to compensate for the difference in the clutch release pressure, which varies according to the actual lowering speed. The faster the load is lowered with the free fall control, the faster the planet hub will cause the pump to turn, increasing the displacement volume drawn out of the control circuit. When the free fall control is returned to neutral, the hydraulic pressure in the clutch piston is vented and the free fall clutch is re-engaged by spring pressure.

## COMBINED EMERGENCY AND CONTROLLED FREE FALL:

The **emergency** and **controlled free fall** can be combined for installations where both of these options are required. Two separate controls must be used for this option and the operating criteria for both functions must be adhered to.

**IMPORTANT:** Under no circumstances must the pressure in the free fall housing be permitted to exceed 10 psi (.7 bar). Excessive pressure in the free fall housing will damage the oil seal separating the free fall housing from the drum interior. Damage to this seal will cause the drum to fill up with hydraulic fluid.

# EXPLANATION OF MODEL CODING

**M25 X - XX - XX - XX X - X XXXX**

**BASIC UNIT SERIES**

M = Equal speed in both directions

**SIZE OF UNIT**

**REDUCTION RATIO**

Only used for non standard reduction ratios

**TYPE OF BRAKE**

- 3 Automatic brake, clockwise drum rotation, internal circulation flow
- 4 Automatic brake, external brake release, clockwise drum rotation, internal circulation flow
- 5 Automatic brake, external brake release, counterclockwise drum rotation, internal circulation flow
- 6 Automatic brake, counterclockwise drum rotation, internal circulation flow
- 7 Automatic brake, clockwise drum rotation, external circulation flow
- 8 Automatic brake, external brake release, clockwise drum rotation, external circulation flow
- 9 Automatic brake, external brake release, counterclockwise drum rotation, external circulation flow
- 10 Automatic brake, counterclockwise drum rotation, external circulation flow

**HYDRAULIC MOTOR**

- 86 Hydraulic motor, 3 inch gear section (12.3 cubic inch displacement)  
(Other gear sections for this motor are optional)

**DRUM SIZE**

- 1 10 inch drum diameter X 17 inch flange diameter X 11 inch length - STANDARD  
(For other drum sizes refer to APPENDIX A)

**OPTIONS**

- C Controlled free fall
- D Emergency free fall
- G Combined emergency and controlled free fall

**DESIGN REVISION**

**SPECIFICATION NUMBER**

Describes features not identified by preceding codes

**NOTE:** Clockwise and counterclockwise drum rotation is the direction of rotation for pulling or hoisting, established by looking at the hydraulic motor.

# OPTIONS

## **COUNTERCLOCKWISE ROTATION:**

The drum rotation of the standard PULLMASTER Model M25 planetary winch with free fall is clockwise for hoisting when looking at the hydraulic motor of the winch. Drum rotation for counterclockwise hoisting direction is available as an option.

## **INTERNAL CIRCULATION:**

The PULLMASTER Model M25-7-86-X has an external circulation flow supply line to cool the brake. Internal circulation is available as an option.

## **EXTERNAL BRAKE RELEASE:**

PULLMASTER planetary winches can be supplied with an **external brake release** which permits release of the automatic disc brake from an external pressure source.



**FAILURE TO PROPERLY VENT EXTERNAL BRAKE RELEASE PORT WILL TRAP BRAKE PRESSURE AND ALLOW THE LOAD TO DROP, CAUSING PROPERTY DAMAGE, SEVERE INJURY OR DEATH. WINCHES SUPPLIED WITH EXTERNAL RELEASE OPTION MUST BE CONNECTED ACCORDING TO TYPICAL HYDRAULIC CIRCUIT.**

## **CABLE DRUM SIZES:**

Aside from the standard drum sizes listed in APPENDIX A, the PULLMASTER Model M25 planetary winch with free fall can be supplied with optional drums to accommodate large wire rope storage capacity.

## **DRUM GROOVING:**

Cable drums for the PULLMASTER Model M25 planetary winch with free fall can be grooved. Where this option is a requirement, it is necessary to state the size of wire rope which is to be used with the winch.

## **OPTIONAL GEAR SECTION FOR THE HYDRAULIC MOTOR:**

The performance of the PULLMASTER Model M25 planetary winch with free fall can be changed by using a different displacement motor. (Contact the factory for performance information of different gear sections.)

## **HYDRAULIC MOTORS FOR HIGH PRESSURE HYDRAULIC SYSTEMS:**

The operating pressure of the PULLMASTER Model M25 planetary winch with free fall is limited to 2500 psi (172 bar). For hydraulic systems operating with a higher range of hydraulic pressure, the winch can be supplied with a hydraulic piston motor, which will provide for the same basic performance in terms of line pull and line speed capacity. (Contact the factory for this requirement.)

The PULLMASTER WINCH CORPORATION will consider other options for quantity requirements.

# SPECIFICATIONS

Performance specifications are based on standard hydraulic motor, gear ratio and cable drum with 7/8 inch diameter wire rope. For other cable drums refer to APPENDIX A. For other reductions or motors, refer to supplement inside back cover. Performance specifications for winches supplied with optional motors are provided in attached supplement.

**CABLE DRUM DIMENSIONS (STANDARD DRUM):**

Barrel diameter	10.00 in	254 mm
Flange diameter	17.00 in	432 mm
Barrel length	11.00 in	279 mm

**CABLE STORAGE CAPACITY:**

<b>(Size of wire rope)</b>	7/16 in	612 ft	186 m
	1/2 in	486 ft	148 m
	9/16 in	383 ft	117 m
	5/8 in	297 ft	90 m
	3/4 in	210 ft	64 m
	7/8 in	140 ft	43 m
	1 in	91 ft	28 m

**MAXIMUM OPERATING PRESSURE:** 2500 psi 172 bar

**MAXIMUM OPERATING VOLUME:** 115 (US) gpm 435 l/min

**MINIMUM OPERATING VOLUME:** 30 (US) gpm 114 l/min

**DRUM TORQUE AT MAXIMUM PRESSURE:** 135,937 lb-in 15,359 Nm

**DRUM RPM AT MAXIMUM VOLUME:** Hoisting 49 rpm

**HOISTING LINE PULL AT MAXIMUM PRESSURE:**

Bare drum	25,000 lb	111.2 kN
Full drum	16,860 lb	75.0 kN

**MAXIMUM ALLOWABLE LINE PULL WHEN USING**

<b>CONTROLLED FREE FALL:</b>	Bare drum	7,500 lb	33.4 kN
	Full drum	5,289 lb	23.5 kN

**HOISTING LINE SPEED AT MAXIMUM VOLUME:**

Bare drum	140 fpm	43 m/min
Full drum	207 fpm	63 m/min

**PERMISSIBLE SYSTEM BACK PRESSURE AT MOTOR RETURN PORT:**

65 psi 4.5 bar

**PERMISSIBLE PRESSURE AT CIRCULATION SUPPLY PORT:**

Brake housing	30 psi	2 bar
Free fall housing	30 psi	2 bar

**LUBRICATING OIL:** Refer to RECOMMENDATIONS for viscosity and instructions.  
Refer to APPENDIX A for oil volume required.




# PERFORMANCE GRAPHS

PG-M25-B


## LINE PULL VS. OIL PRESSURE

MAXIMUM ALLOWABLE LINE PULL WHEN USING CONTROLLED FREE FALL:

Bare drum	7,500 lb	33.4 kN
Full drum	5,289 lb	23.5 kN

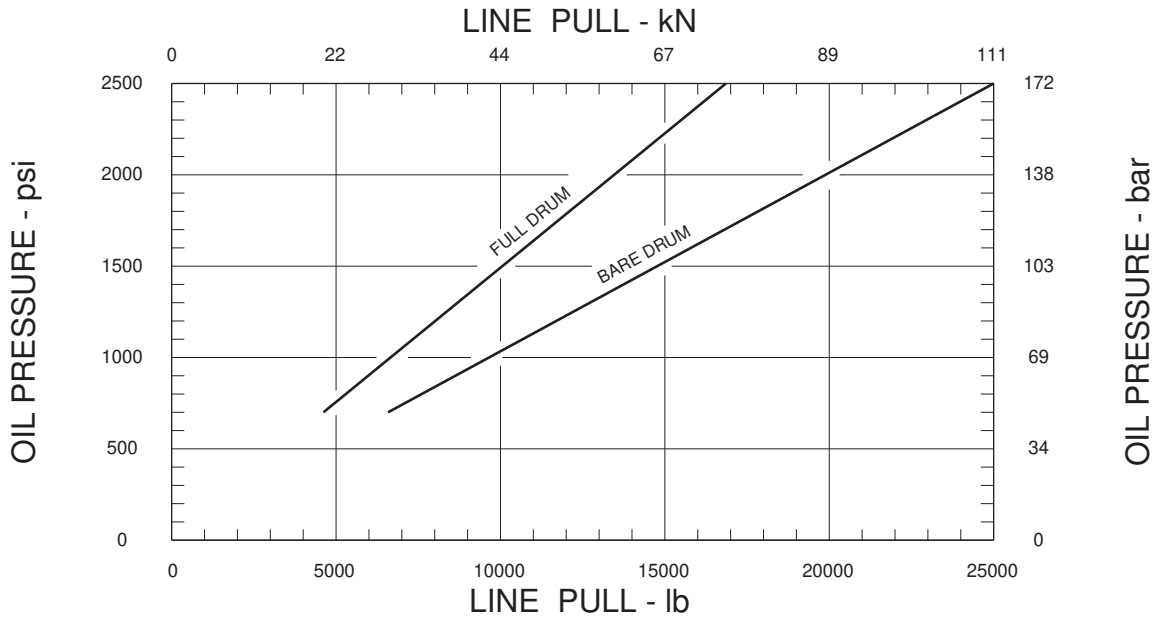

## LINE SPEED VS. OIL VOLUME

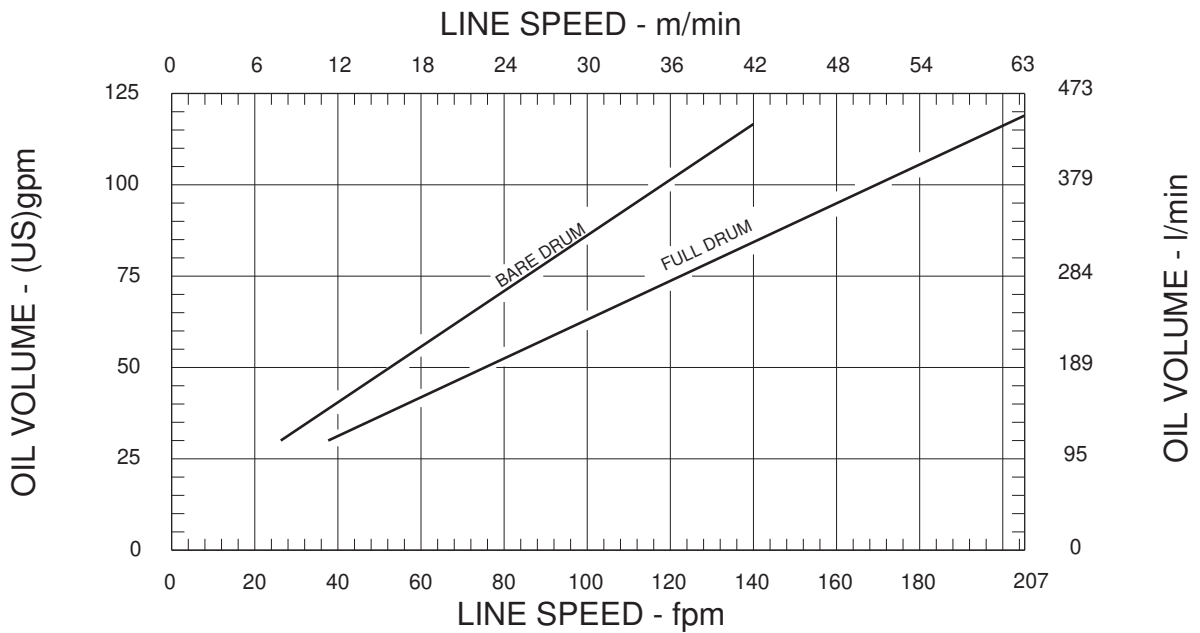


Performance graphs are based on standard hydraulic motor, gear ratio and cable drum with 7/8 inch diameter wire rope.

# TYPICAL HYDRAULIC CIRCUIT

EMERGENCY FREE FALL:

HC-M25-X-XX-XD-B

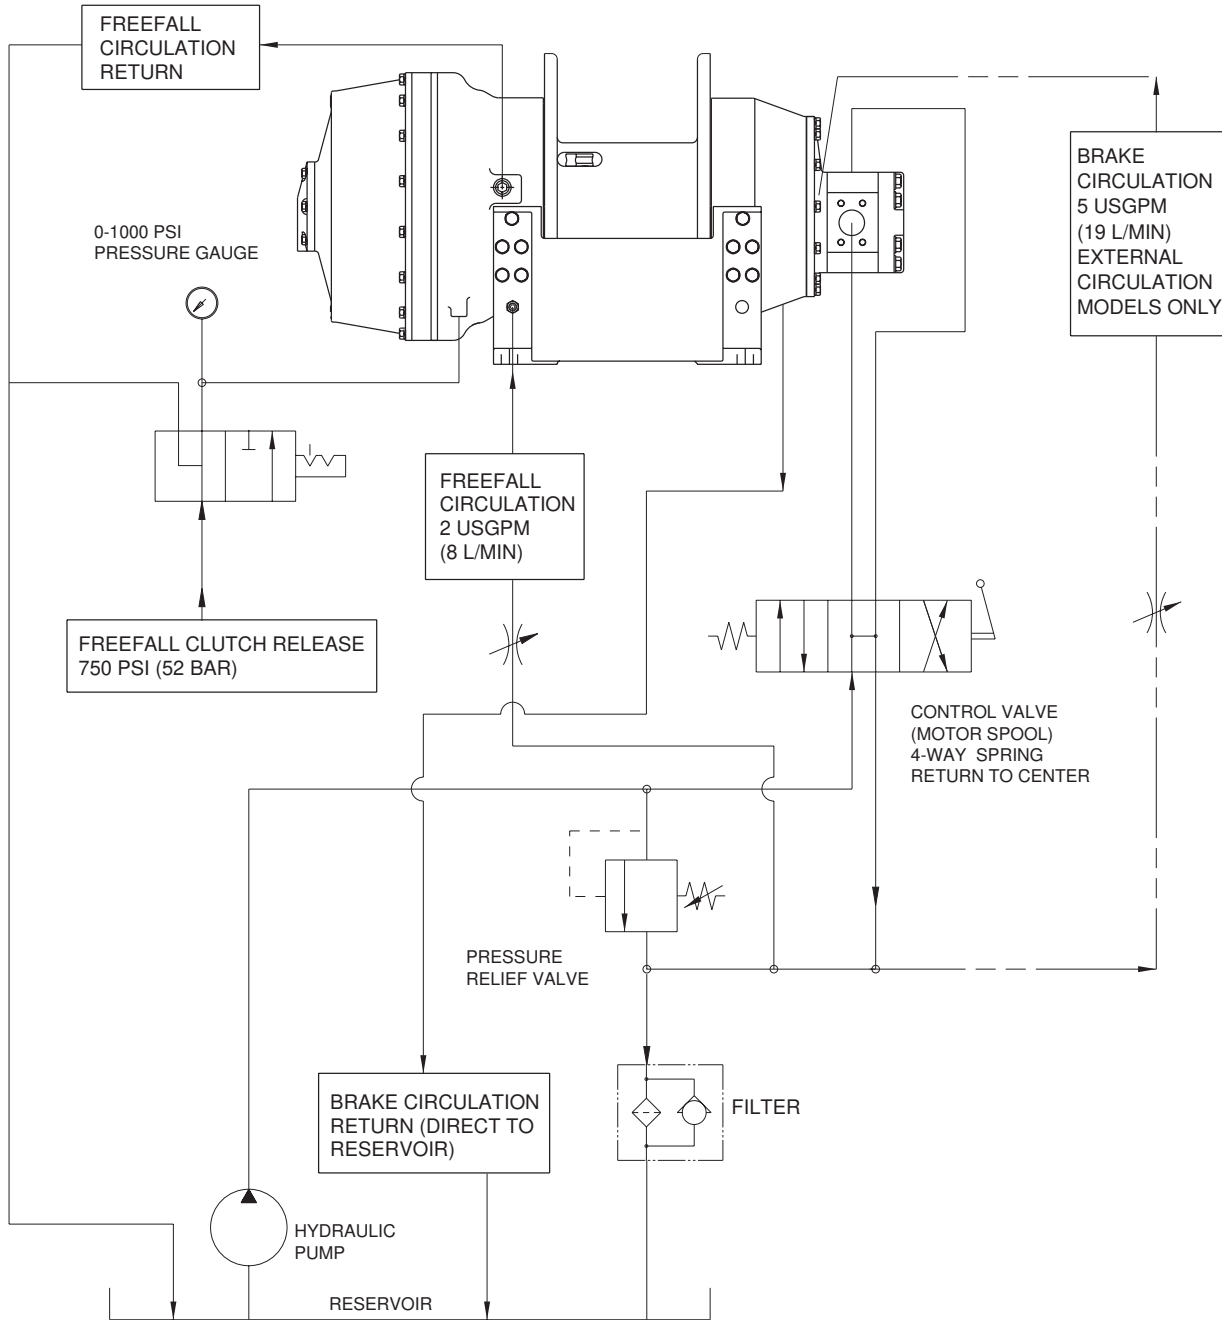


**DANGER**

**RE-ENGAGING FREE FALL CLUTCH WHILE LOAD IS DROPPING CAUSES SHOCK LOADS AND WILL LEAD TO CABLE FAILURE, PROPERTY DAMAGE, SEVERE INJURY OR DEATH. INTERLOCK HYDRAULIC CONTROL TO PREVENT RE-ENGAGING FREE FALL CLUTCH WHILE LOAD IS DROPPING.**

# TYPICAL HYDRAULIC CIRCUIT

CONTROLLED FREE FALL:


HC-M25-X-86-XC

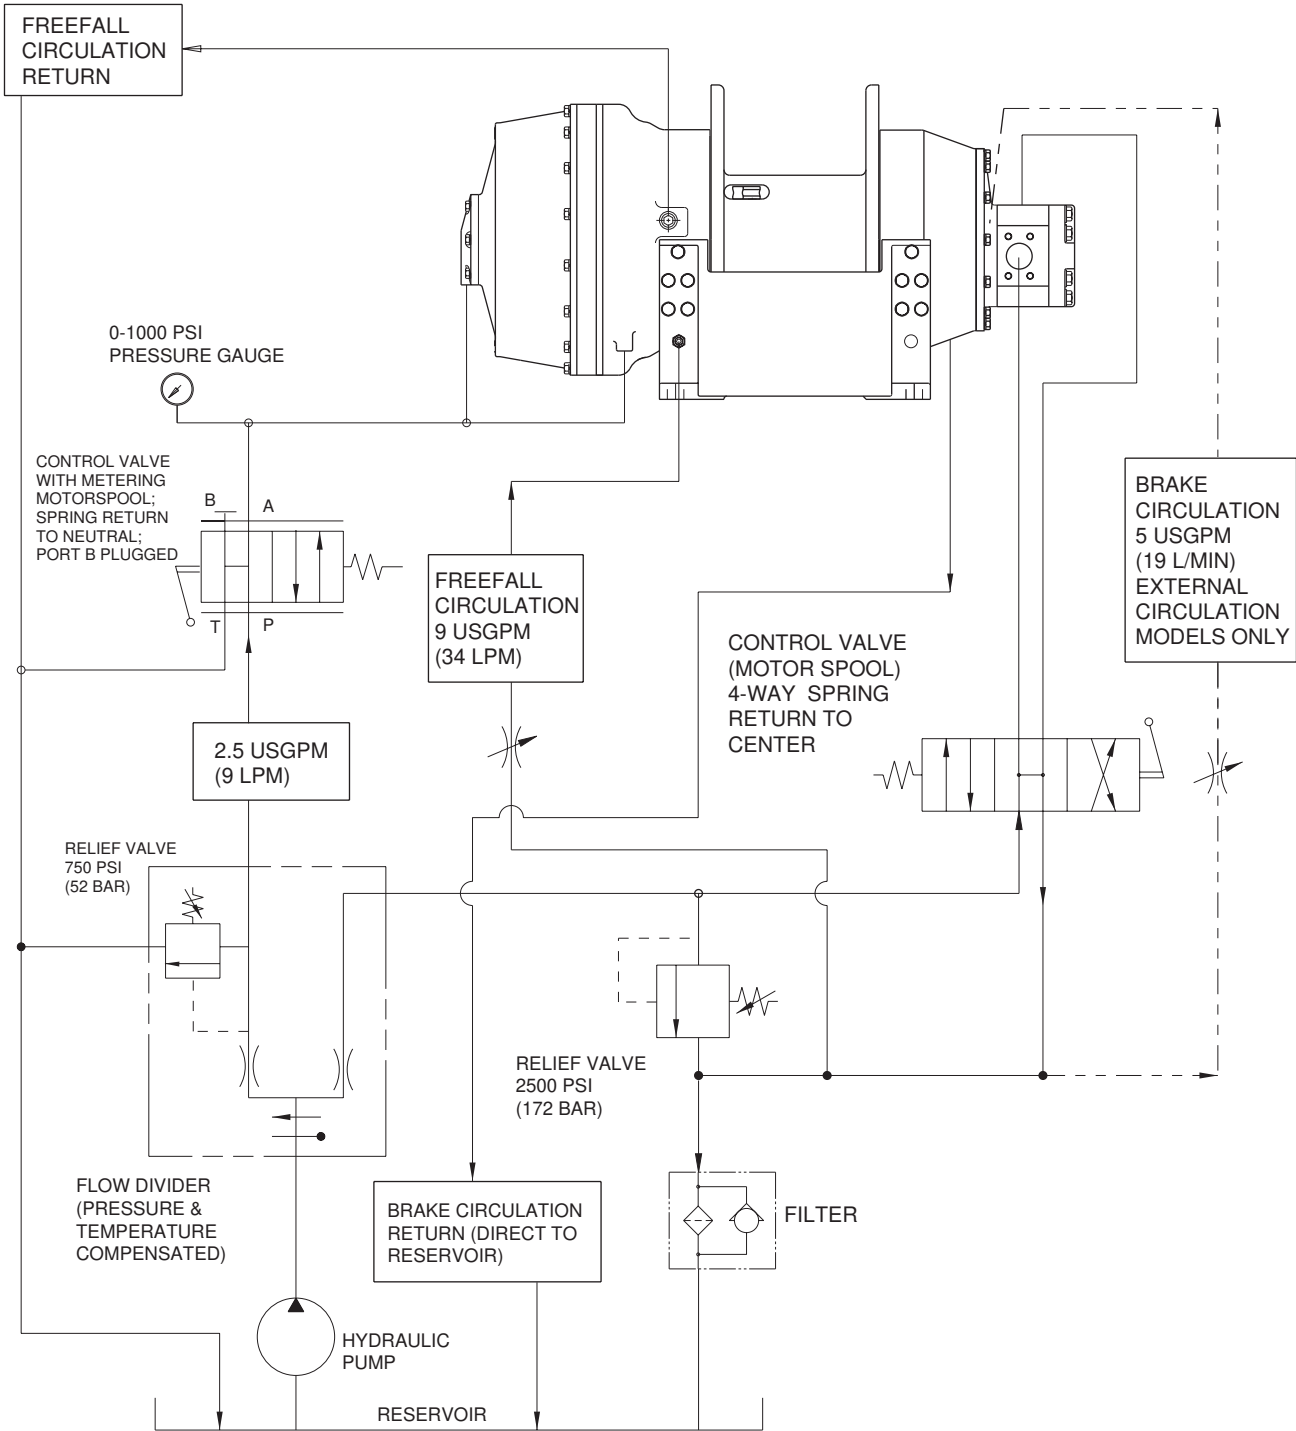

# TYPICAL HYDRAULIC CIRCUIT

COMBINED EMERGENCY & CONTROLLED FREE FALL:

HC-M25-X-86-XG

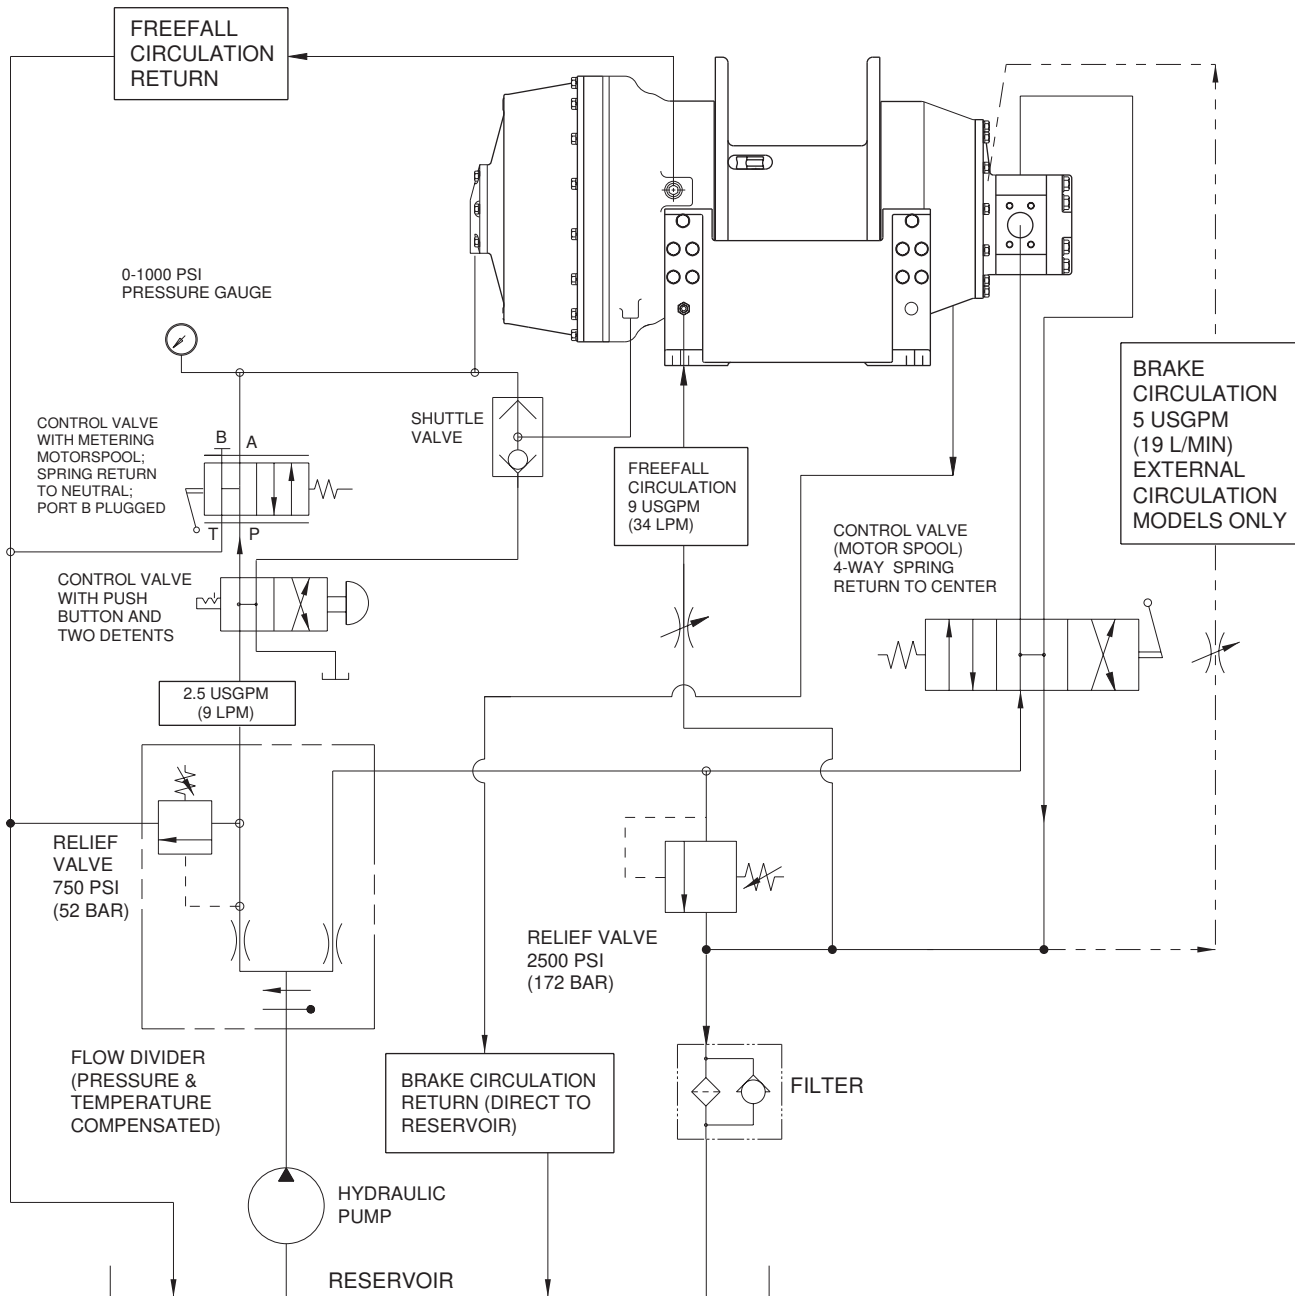

# RECOMMENDATIONS

## HYDRAULIC FLUID:

The hydraulic fluid selected for use with PULLMASTER planetary winches should be a high grade, petroleum based fluid, with rust, oxidation and wear resistance. Fluid cleanliness and operating viscosity are critical to winch reliability, efficiency and service life.

For optimum performance, the recommended viscosity range at operating temperature is 81 - 167 SUS (16 - 36 CS). For extreme operating conditions of short duration, the maximum viscosity range of 58 - 4635 SUS (10 - 1000 CS) should not be exceeded.

For optimum performance, the winch recommended hydraulic fluid temperature operating range is 80 - 150F (27 - 66 C). For extreme operating conditions of short duration, the maximum temperature range of -5 - 180F (-21 - 82 C) should not be exceeded.

## LUBRICATION:

The winch gear train requires oil bath lubrication. The winch is shipped from the factory without lubricating oil.

**IMPORTANT:** ADD LUBRICATING OIL BEFORE RUNNING WINCH.

Refer to INSTALLATION DIMENSIONS for location of lubricating oil fill port. Refer to APPENDIX A for quantity of oil required. For normal operating temperature use SAE 90 lubricating oil. Consult lubricating oil supplier or factory for temperatures beyond normal operating range.

The final drive of the winch is lubricated by the hydraulic oil which is circulated through the free fall housing.

## HYDRAULIC PUMP:

For maximum performance of the PULLMASTER planetary winch, the hydraulic pump must supply the maximum flow of hydraulic fluid at the hydraulic pressure stated in SPECIFICATIONS.

## HYDRAULIC WINCH CONTROL VALVE:

The standard control valve used for operation of the PULLMASTER planetary winch must have a four-way, spring return to neutral feature, which provides for open flow from the pressure ports of the winch to the reservoir in neutral position of the control (motor spool). It is important to point out that good speed control, especially when lowering a load, depends on the "metering" characteristics of the control valve. The better the oil flow is "metered" the better will be the speed control.

## HYDRAULIC PRESSURE RELIEF:

The hydraulic circuit for the PULLMASTER planetary winch requires a pressure relief set at the operating pressure (see SPECIFICATIONS). Usually, a pressure relief is part of the hydraulic control valve. Where this is not the case, a separate pressure relief valve must be installed and set at the recommended maximum pressure.

## HYDRAULIC RESERVOIR:

It is recommended that the hydraulic reservoir has sufficient capacity to provide good heat dissipation in order to prevent over-heating of the hydraulic fluid. The hydraulic reservoir should be made from clean and scale-free material to prevent contamination of the hydraulic fluid. In order to prevent air from being mixed with the hydraulic fluid, the reservoir should have an over-flow baffle separating the return lines from the suction line and all return lines should enter the reservoir below the fluid level. The reservoir should be mounted close to and above the hydraulic pump in a location which provides for free air circulation around the reservoir.

## HYDRAULIC HOSES:

The following hydraulic hoses are recommended for maximum efficiency of the PULLMASTER Model M25 planetary winch with free fall:

Pressure lines:	Equivalent to SAE 100R 12-32
Circulation return line:	Equivalent to SAE 100R 4-16
Circulation supply line:	Equivalent to SAE 100R 6-6
Free fall release line:	Equivalent to SAE 100R 3-4

It is recommended that a larger size of hydraulic hose is installed where the pressure lines or the circulation lines are excessively long.

## HYDRAULIC FILTER:

Hydraulic filter recommendations for the hydraulic circuit of the PULLMASTER planetary winch, based on a return line filter, are given as follows:

Average Atmosphere:	10 microns
Dusty Atmosphere:	5 microns

In order to prevent accidental stoppage of the return line flow, the oil filter should have a by-pass feature.

# RECOMMENDATIONS CONTINUED

## EMERGENCY FREE FALL

### CONTROL VALVE:

The **emergency free fall** requires a two position, three-way valve. The pressure port must be open to the reservoir when the emergency free fall is not actuated and must pressurize the free fall release port on the winch when the free fall control button is pressed. A selector valve with two detent positions is best suited. If the **emergency free fall** is combined with **controlled free fall**, a standard two position, four-way selector valve with two detents should be used. (Refer to TYPICAL HYDRAULIC CIRCUIT.)

## CONTROLLED FREE FALL

### CONTROL VALVE:

For positive speed control, the valve used for the **controlled free fall** must be a "spring return", two position selector valve, which has good metering characteristics and on which the pressure port is open to the reservoir when the **controlled free fall** is not operating.

## PRESSURE GAUGE:

To monitor free fall release port pressure install a 1000 psi (69 bar) pressure gauge between the free fall control valve and the release port.

## IMPORTANT:

The circulation return lines must go direct to reservoir. Pressure in the free fall housing must not be permitted to exceed 10 psi (.7 bar).

## USE OF AN E STOP:

### (FOR EUROPEAN MACHINERY DIRECTIVE APPLICATIONS)

The use of an E stop (emergency) is mandatory in the controls circuit. The E stop is to be placed in the operator's control panel. The E stop must be designed and placed in line with EN 60204 and EN 418.

# INSTALLATION INSTRUCTIONS



**DANGER**

**FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS WILL  
RESULT IN PROPERTY DAMAGE, SEVERE INJURY OR DEATH.**

The initial installation or mounting of a PULLMASTER planetary winch is critically important for proper operation and performance. If the winch is mounted to an uneven surface, the centre line of the unit can be distorted to a point where the winch will not operate in either direction. It is therefore very important that the following instructions are observed when a PULLMASTER planetary winch is installed:

- 1) Make certain that the mounting platform is sufficiently strong in order to avoid deflection when a load is lifted.
- 2) Set the winch on the mounting platform and check for surface contact on all mounting pads of the winch.
- 3) If there is a space between the mounting surface and one of the mounting pads, the mounting surface is not even and the space below the mounting pad must be shimmed. If this condition exists, proceed as follows:
  - a) Install mounting bolts snug tight on the three mounting pads which are in contact with the mounting surface. (For mounting bolt size and grade see INSTALLATION DIMENSIONS.)
  - b) Measure the space underneath the fourth mounting pad with a feeler gauge and use shim stock of equivalent thickness in the space between the mounting pad and the mounting surface.
  - c) Only after this procedure should the fourth mounting bolt be installed. Tighten all four bolts per BOLT TORQUE CHART.
- 4) Fill the winch with lubricating oil. (See APPENDIX A for oil volume required.)
- 5) Use recommended circuit components and hydraulic hoses.
- 6) The circulation return line of the winch should be plumbed in such a manner that the brake housing and free fall housing remain full of oil at all times. Connect the return lines directly to reservoir. Do not connect to a common return line.
- 7) Bleed the air out of the free fall control circuit by loosening the connection at the free fall release port on the winch. With no load on the cable drum, operate the free fall control valve, letting all air escape, then re-tighten the connection at the release port.
- 8) Before operating the winch with a load, verify adequate circulation flow through the circulation return line as stated in TYPICAL HYDRAULIC CIRCUIT. Verify that pressure measured at the circulation supply port does not exceed the permissible pressure stated in SPECIFICATIONS. Winches equipped with the internal circulation option will supply circulation flow only when the winch is run in the lowering direction.

# OPERATING INSTRUCTIONS



**DANGER**

**FAILURE TO FOLLOW OPERATING INSTRUCTIONS WILL  
RESULT IN PROPERTY DAMAGE, SEVERE INJURY OR DEATH.**

After the PULLMASTER planetary winch has been installed in accordance with the INSTALLATION INSTRUCTIONS, the wire rope can be fastened to the cable drum.

**IMPORTANT:** The ropes, chains, slings, etc. are not part of the winch and are not covered by this manual. Refer to manufacturer's handling, inspection and maintenance recommendations to avoid potential accidents. For selection of ropes, etc. please check following product standards: DIN 15020, prEN818-1/9, prEN 1492-1/2, prEN 1677-1/3 and other relevant product standards.


- 1) The cable drum of the PULLMASTER planetary winch has two cable anchor slots, one for clockwise and one for counterclockwise hoisting. Standard rotation for hoisting is clockwise when looking at the hydraulic motor of the unit. It is critical to select the cable anchor slot which will permit winding of the wire rope on the drum in the correct direction of rotation. If the wire rope is wound on the cable drum in the wrong direction of rotation, the winch will have no braking capacity. Each winch is shipped from the factory with a label on the drum indicating the correct cable anchor slot.

## WIRE ROPE INSTALLATION

Clockwise hoisting winch shown.

(Use cable anchor slot on opposite side of drum for counterclockwise hoisting winch.)

Feed the wire rope through the cable anchor slot. Loop rope back into slot as shown. Insert cable anchor into slot, small end first. Pull rope tight to wedge rope in slot.

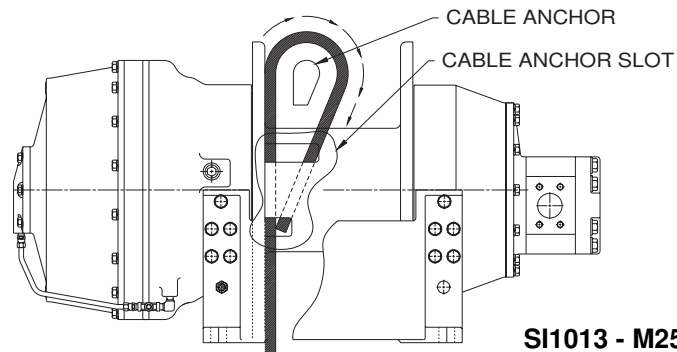

- 2) On wire rope installation, care must be taken that the wire rope is wrapped completely around the cable anchor and properly pulled into the cable anchor slot in the cable drum. The cable drum requires 5 wraps of wire rope for safety.
- 3) The winch operation is controlled by a single control valve lever which has a **forward**, a **reverse** and a **neutral** position. Speed control in either direction is obtained by modulation of the control valve lever. Maximum line speed in either direction is obtained when the control valve lever is moved as far as it can go. The disc brake of the winch will come on automatically when the winch control lever is returned to **neutral**.
- 4) Always warm up equipment prior to operating winch, particularly in low ambient temperature. Circulate hydraulic oil through the winch control valve for several minutes to warm the hydraulic system. To prime the winch with warm oil, operate the winch at slow speed, forward and reverse, several times.
- 5) Prevent corrosion damage to winch interior. If not used regularly, run winch up and down at least once every two weeks.
- 6) To ensure proper winch installation and function, raise and lower a full test load to a safe height before using winch for regular operation at the start of each shift.



# OPERATING INSTRUCTIONS CONTINUED

## EMERGENCY FREE FALL:

To actuate the **emergency free fall**, push the emergency free fall control to disconnect the cable drum from the gear train of the winch. The load (minimum 500 lb - 227 kg) will drop. The speed of the free fall will depend on the size of the load on the wire rope.



**DANGER**

**RE-ENGAGING FREE FALL CLUTCH WHILE LOAD IS DROPPING CAUSES SHOCK LOADS AND WILL LEAD TO CABLE FAILURE, PROPERTY DAMAGE, SEVER INJURY OR DEATH. INTERLOCK HYDRAULIC CONTROL TO PREVENT RE-ENGAGING FREE FALL CLUTCH WHILE LOAD IS DROPPING.**

## CONTROLLED FREE FALL:

To operate the **controlled free fall**, open the free fall control lever gradually to obtain smooth acceleration of the lowering speed of the winch. The lowering speed is in direct proportion with the movement of the free fall control lever. To decelerate or slow down the load, slowly return the control lever back to its neutral position. Sudden stops of an accelerating load and erratic operation of the free fall control lever should be avoided. For better modulation of the free fall control, a long handle should be used on the free fall control valve.

**IMPORTANT:** The **controlled free fall** is not designed nor intended to lower the maximum load in a controlled freefall. The permissible load of the PULLMASTER Model M25 **controlled free fall** operation is 30% of the maximum line pull capacity of the winch.

If, after a new installation, the winch does not function properly, refer to the TROUBLESHOOTING section of this manual.

# TROUBLE SHOOTING

**GENERAL:**

In most cases, when the hydraulic winch does not perform satisfactorily, the cause of malfunction is found somewhere in the hydraulic circuit. Before the winch is removed from its mounting and disassembled, all of the hydraulic circuit components should be checked for proper function.

**IMPORTANT:**

**The hydraulic oil volume relates to the line speed or rpm of the winch.**

Therefore, if the winch does not produce the specified maximum rated line speed or drum rpm, a loss of hydraulic flow somewhere in the hydraulic circuit system can be analysed. If this condition exists, install a flow meter into the hydraulic circuit to check the volume supplied to the pressure port of the hydraulic winch motor when the winch control is completely opened. The flow meter should indicate the maximum operating volume. If this test indicates a loss of hydraulic flow, check the hydraulic pump, the relief valve and the control valve. If the pump is driven by V-belts, check for belt slippage.

**The hydraulic pressure relates to the line pull or lifting capacity of the winch.**

If the winch will not lift the specified maximum line pull, install a pressure gauge into the pressure line leading to the hoisting port on the hydraulic winch motor. Stall the winch to prevent rotation of the drum and then open the control valve. Check the hydraulic pressure reading of the installed pressure gauge. If the pressure reads below the specified maximum operating pressure, look for trouble in the hydraulic pump, the relief valve and the control valve. If the pump is driven by V-belts, check for belt slippage. When checking oil pressure and volume in the hydraulic circuit, make certain that the hydraulic reservoir is filled to the top level and the hydraulic pump is running at maximum operating rpm.

Only if the hydraulic system has been checked and found to be in order, use the following indications for probable causes of failure in the winch:

FAILURE	PROBABLE CAUSE
<p><b>Winch will not produce line pull at maximum pressure as listed in SPECIFICATIONS.</b></p>	<ul style="list-style-type: none"> <li>a) Winch is mounted to an uneven surface. (See INSTALLATION INSTRUCTIONS.)</li> <li>b) Cable sheaves or block purchase operated with the winch are not turning freely.</li> <li>c) Damage or wear in the hydraulic motor.</li> <li>d) Excessive back pressure in the hydraulic system.</li> <li>e) Relief valve may be set too low. (See SPECIFICATIONS for maximum operating pressure.)</li> <li>f) Clutch release valve may be in release position.</li> </ul>
<p><b>Winch will not produce line speed at maximum volume as listed in SPECIFICATIONS.</b></p>	<ul style="list-style-type: none"> <li>a) Winch is mounted to an uneven surface. (See INSTALLATION INSTRUCTIONS.)</li> <li>b) Cable sheaves or block purchase operated with the winch are not turning freely.</li> <li>c) Damage or wear in the hydraulic motor.</li> <li>d) Excessive back pressure in the hydraulic circuit.</li> </ul>
<p><b>Winch will not reverse.</b></p>	<ul style="list-style-type: none"> <li>a) Leakage out of the brake piston prevents the brake from being released against the brake springs. This is caused by damaged O-ring seals on the brake piston.</li> <li>b) The O-ring seals, on the brake release channel between the motor adaptor and the brake housing is damaged. If this failure occurs there will be substantial leakage from between the motor adaptor and brake housing.</li> <li>c) Insufficient hydraulic pressure. (See SPECIFICATIONS for minimum operating pressure.)</li> <li>d) Winch is mounted to an uneven surface. (See INSTALLATION INSTRUCTIONS.)</li> <li>e) Hydraulic pressure is not reaching the brake piston (plugged brake release orifice in the brake housing).</li> </ul>

# TROUBLESHOOTING CONTINUED

FAILURE	PROBABLE CAUSE
<b>Brake will not hold.</b>	<ul style="list-style-type: none"> <li>a) Brake plates or divider plates have been damaged by contamination in the hydraulic fluid, or lack of circulation flow in the brake housing.</li> <li>b) Brake piston is seized in the brake housing because of contamination in the hydraulic fluid.</li> <li>c) Excessive back pressure in the return line causes the brake to be released.</li> <li>d) Control valve has incorrect spool, which traps hydraulic pressure in the brake piston when the control valve handle is returned to neutral position. For proper function of the automatic brake, both pressure ports of the winch must be open to the reservoir in neutral position of the control valve.</li> <li>e) Hydraulic pressure is trapped in the clutch piston, preventing total engagement. This is caused by using an incorrect control valve. The free fall control valve must leave the free fall release port open to reservoir when not activated.</li> <li>f) Wire rope is fastened to the incorrect cable anchor slot.</li> <li>g) Sprag clutch is damaged or surfaces where sprag clutch engages on motor drive shaft or brake hub are worn or indented.</li> <li>h) Winch supplied with external brake release option is not plumbed per TYPICAL HYDRAULIC CIRCUIT. Failure to vent external brake release port to reservoir may trap pressure and cause winch brake to slip.</li> </ul>
<b>Brake vibrates when powering down a load.</b>	<ul style="list-style-type: none"> <li>a) Pump does not supply sufficient flow. Pump rpm must be maintained at normal operating speed when a load is lowered.</li> <li>b) Brake is running too hot. This is caused by insufficient circulation flow. To check the circulation, observe the flow of oil from the circulation return line of the winch (approx. 5 (US) gpm - 19 l/min when the winch is reversed).</li> <li>c) Control valve for the winch operation has poor 'metering' characteristics.</li> <li>d) Damaged brake plates or divider plates.</li> <li>e) The over-running clutch, which connects the motor shaft with the brake assembly, is damaged.</li> <li>f) Air mixed with hydraulic oil (foamy oil).</li> </ul>
<b>Free fall clutch cannot be disengaged.</b>	<ul style="list-style-type: none"> <li>a) Insufficient pressure or flow supplied to free fall release port (refer to TYPICAL HYDRAULIC CIRCUIT).</li> <li>b) O-ring seals in clutch piston are damaged.</li> <li>c) Insufficient load on the wire rope. A minimum of 500 lb (227 kg) on a standard -1 drum is required to drop a load in free fall.</li> </ul>

Refer to the SERVICE INSTRUCTIONS if it becomes necessary to disassemble the Model M25 winch with free fall.

# TROUBLESHOOTING CONTINUED

FAILURE	PROBABLE CAUSE
<b>Free fall cannot be controlled.</b>	<ul style="list-style-type: none"> <li>a) Emergency free fall is non-controllable.</li> <li>b) Piping circuit or control valve is incorrect. Check hydraulic circuit.</li> <li>c) Control valve used has poor metering characteristics. The control valve should have a flow capacity of 3-6 gpm maximum. If a large volume control valve is used, it may not provide good metering of the hydraulic oil, resulting in poor speed control.</li> <li>d) Hydraulic metering pump, installed in the end housing, is damaged.</li> </ul>
<b>Oil leaks.</b>	<ul style="list-style-type: none"> <li>a) Oil leaks from the motor flange are caused by a damaged O-ring seal on the motor flange.</li> <li>b) Oil leaks occurring between the cable drum flange and brake housing are caused by excessive pressure in the brake housing or free fall housing. Excessive pressure in the brake housing will damage oil seal, item 607, which separates the brake housing from the drum interior. Excessive pressure in the free fall housing will damage oil seal, item 505, which separates the free fall housing from the drum interior. In this condition hydraulic fluid will leak into the drum interior, then damage oil seal, item 531.</li> <li>c) Oil leaks occurring between the cable drum flange and free fall housing are caused by excessive pressure in the free fall housing. Excessive pressure in the free fall housing will damage oil seal, item 105. Maximum allowable back pressure in the free fall housing is 10 psi (0.7 bar). Check for restrictions in circulation return line (must go directly to reservoir).</li> <li>d) Oil leaking out of the free fall housing on either side of the spring retainer is caused by a damaged O-ring seal, item 213.</li> <li>e) Oil leaking out of the end cap indicates a damaged O-ring, item 241.</li> </ul>

Refer to the SERVICE INSTRUCTIONS if it becomes necessary to disassemble the Model M25 winch with free fall.

# SERVICE INSTRUCTIONS

## GENERAL:

Before attempting disassembly of the PULLMASTER Model M25 planetary winch with free fall, the following instructions for disassembly and reassembly should be read and understood:

It is suggested that all expendable parts, such as O-rings and oil seals, are not reused on reassembly. It is therefore important to have a seal kit (Part No. 23115) and, providing the hydraulic motor has to be serviced, a seal kit (Part No. 23117) on hand before the unit is taken apart. Two new needle bearings, item 875, may also be required (Part No. 25352).

**NOTE:** Backup washers may be included with seal kit. Install with oil seals as per instructions. If not present in seal kit, the oil seals supplied do not require backup washers.

A clean working area is of prime importance, similar to conditions used for service work on any other hydraulic component.

All parts, as they are removed from the winch assembly, should be inspected for wear and damage. Worn or damaged parts must be replaced. Thoroughly clean parts before reassembly. Do not use solvent to clean the brake friction plates.

During reassembly, lubricate all O-rings and oil seals with grease before installation.

In the following service instructions, reference to parts is made by numbers and shown on the applicable group drawings.

## DISASSEMBLY

For the majority of required service or repair work, disassembly is required only on the brake housing of the PULLMASTER Model M25 planetary winch with free fall. There are no special tools needed for the service or repair work and no adjustments or calibrations are necessary. Proceed with the disassembly as follows:

### DISASSEMBLY OF HYDRAULIC MOTOR ASSEMBLY:

If the analysed service or repair work requires access to the interior of the brake housing, the hydraulic motor should not be disassembled. In this case, the hydraulic motor should be removed together with the motor adaptor as a complete assembly. If a problem has been analysed to be in the hydraulic motor, proceed with the disassembly as follows:

- 1) Remove eight hex capscrews, item 951, together with lockwashers, item 953, from motor assembly.

**IMPORTANT:** Failure to exercise care when removing the motor port end cover or gear housing could permanently damage the machined surfaces of these motor components. Take care not to damage machined surfaces of motor components at disassembly.

- 2) Remove (pry loose if necessary) port end cover, item 870, together with bearings, item 875, and ring seal, item 877. Thrust plate, item 885, and dowel pins, item 865, may stay in gear housing.
- 3) If thrust plate comes off with end cover, carefully pry it off of bearings, item 875, and discard pocket seals, item 887.
- 4) Remove gear set, item 881, which consists of two gears which are a matched set.
- 5) Carefully pry gear housing, item 861, off of motor adaptor, item 800. Thrust plate, item 885, and dowel pins, item 865, may stay in gear housing.
- 6) If thrust plate stays on motor adaptor, carefully pry it off of bearings, item 875, and discard teflon seals, item 887.
- 7) Discard gasket seals, item 869. It is also advisable to replace ring seals, item 877, at this time. Bearings, item 875, must be removed to allow access to ring seals.

Teflon seals, gasket seals and ring seals in the hydraulic motor assembly are not part of the winch seal kit. The

# SERVICE INSTRUCTIONS CONTINUED

seal kit for the hydraulic motor can be ordered from the factory under Part No. 23117. All parts of the hydraulic motor, with the exception of the motor adaptor, item 800, and the port end cover, item 870, are standard parts of the hydraulic motor, having a 3 inch gear section. All of these parts can be ordered from PULLMASTER or an Authorized Distributor / Dealer in Canada, the United States and in most overseas areas.

## REMOVE HYDRAULIC MOTOR ASSEMBLY:

If disassembly of hydraulic motor is not necessary, proceed as follows:

- 1) Remove 12 hex head capscrews, item 537, with lockwashers, item 541, from motor adaptor, item 800. Since brake springs, item 752, apply pressure against inside motor adaptor, it is recommended that hex capscrews are unscrewed, one turn at a time, until spring pressure has been released. The complete motor assembly, including motor adaptor, can now be removed from brake housing assembly.
- 2) Remove and discard three O-rings, item 801, and O-ring, item 707. (O-rings, item 801, seal pressure transfer hole for automatic brake release and are situated on flange of brake housing.)

## DISASSEMBLE BRAKE HOUSING ASSEMBLY:

- 1) After motor assembly has been removed, all parts of brake assembly are accessible. Remove 14 brake springs, item 752. Thoroughly examine springs for damage and measure overall length. Overall spring length should be 2.27 inches. If any spring measures less than 2.21 inches, replace all springs as a set.
- 2) Pull motor drive shaft, item 730, and complete brake hub assembly from brake housing.
- 3) Disassemble brake hub assembly by removing circlip, item 719, from motor drive shaft. Remove motor drive shaft from brake hub, item 720. Remove sprag clutch aligners, items 722 and 724, and sprag clutch, item 723, from brake hub.



**DANGER**

**MINOR SURFACE DEFECTS WHERE THE SPRAG CLUTCH ENGAGES THE MOTOR DRIVE SHAFT AND BRAKE HUB, WILL RESULT IN BRAKE FAILURE AND ALLOW THE LOAD TO DROP, CAUSING PROPERTY DAMAGE, SEVERE INJURY OR DEATH. THOROUGHLY INSPECT THESE AREAS AND, IF NECESSARY, REPLACE MOTOR DRIVESHAFT, SPRAG CLUTCH AND BRAKE HUB AS A SET.**

- 4) Thoroughly inspect motor drive shaft, item 730, and brake hub, item 720, particularly surfaces where sprag clutch, item 723, engages. If any indentation or surface damage is detected, replace brake hub, sprag clutch and motor drive shaft as a set.
- 5) Pull brake piston, item 750, out of brake housing using two 5/8-11NC bolts screwed into two puller holes in piston. Discard O-rings, item 751 and item 753.
- 6) Thoroughly examine inner bores of brake housing and outer diameters of brake piston for scoring caused by hydraulic fluid contamination. Minor surface damage may be repaired by polishing with a fine emery cloth.



**DANGER**

**DAMAGED FRICTION OR DIVIDER PLATES WILL REDUCE BRAKING CAPACITY AND ALLOW THE LOAD TO DROP, CAUSING PROPERTY DAMAGE, SEVERE INJURY OR DEATH. SOLVENT MAY DAMAGE THE FRICTION PLATES. DO NOT USE SOLVENT TO CLEAN THE FRICTION PLATES. PERFORM THOROUGH INSPECTION AND, IF NECESSARY, REPLACE FRICTION AND DIVIDER PLATES AS A SET.**

# SERVICE INSTRUCTIONS CONTINUED

- 7) Remove five friction plates, item 715, together with six divider plates, item 713, and inspect for damage or wear. Plates should be flat and smooth. Plates should not show heat discoloration. Paper material on friction plates should be intact and grooved. If any damage is detected, replace friction and divider plates as a set.
- 8) Remove brake spacer, item 712.
- 9) Oil seal, item 607, and backup washer, item 606, which seals brake housing from cable drum interior, can now be removed and discarded.

All parts have now been removed from the brake housing and there is no need for further disassembly, unless a failure has been analysed in the remaining winch assembly.

## DISASSEMBLY OF FREE FALL ASSEMBLY:

If a failure occurs in free fall section of the winch, proceed as follows:

- 1) Remove drain plug, item 121, from end cover, item 240, and drain lubricating oil from free fall housing and end cover. The oil will drain quicker if the filler plug, item 121, is removed.
- 2) If a failure has occurred in metering pump, the pump can be removed without disassembling the rest of the free fall assembly. To remove metering pump, remove six capscrews, item 197, six lockwashers, item 199, and remove and discard O-ring, item 241. If winch is a controlled free fall model, tube assembly, item 216, need to be removed also. The metering pump is not user serviceable, and must be replaced.
- 3) Remove 16 hex head capscrews, item 537, with lockwashers, item 541, and separate end cover, item 240, from free fall housing, item 200. Remove and discard O-ring, item 213, from flange of spring retainer, item 212.
- 4) Inspect planet hub stopper, item 126, and sungear stopper, item 344, for excessive wear. Replace if planet hub stopper is less than .21 inch thick and replace sungear stopper if less than .22 inch thick.
- 5) Pull final planet assembly out of final internal gear, item 330, and inspect for wear or damage. (Mounting capscrews, item 551, can be screwed into two tapped pulling holes in planet hub to assist with removal of final planet hub assembly.)
- 6) Inspect three final planet gears, item 320, for damage or wear. If it is necessary to remove final planet gears, remove circlip, item 311, and press planet pin, item 310, out of planet hub, item 300. Inspect loose rollers, item 323, and two thrust washers, item 321, and replace if damaged.
- 7) Pull final sungear, item 340, out of free fall assembly.
- 8) Remove circlip, item 331, from clutch connecting shaft, item 220, and pull off final internal gear, item 330.
- 9) Remove 16 socket head capscrews, item 207, along with lockwashers, item 217, from spring retainer, item 212.

**CAUTION:** Since 88 springs apply pressure behind spring retainer, socket head capscrews should be loosened one turn at a time, until spring pressure has been relieved.

- 10) Pull spring retainer, item 212, out of free fall housing, item 200. Remove and discard O-ring, item 213, from spring retainer.
- 11) Remove 88 springs, item 232, from clutch piston, item 230.
- 12) Pull clutch piston, item 230, out of free fall housing, item 200. (Use two long 5/8-11NC capscrews screwed into piston to assist removal. Alternatively, compressed air may be carefully applied to free fall release port to assist removal of clutch piston.)

# SERVICE INSTRUCTIONS CONTINUED

- 13) Remove and discard O-rings, items 231 from clutch piston, and 233 from free fall housing.
- 14) Check clutch piston outside diameters and inside diameters of free fall housing for surface scratches due to contamination resulting from particles in the hydraulic fluid. If there is any evidence of surface damage, polish with fine emery cloth.
- 15) Pull clutch connecting shaft, item 220, out of free fall housing, along with two bearings, item 215.



**DANGER**

**DAMAGED FRICTION OR DIVIDER PLATES WILL REDUCE BRAKING CAPACITY AND ALLOW THE LOAD TO DROP, CAUSING PROPERTY DAMAGE, SEVERE INJURY OR DEATH. SOLVENT MAY DAMAGE THE FRICTION PLATES. DO NOT USE SOLVENT TO CLEAN THE FRICTION PLATES. PERFORM THROUGH INSPECTION AND, IF NECESSARY, REPLACE FRICTION AND DIVIDER PLATES AS A SET.**

- 16) Remove 9 friction plates, item 206, together with 10 divider plates, item 204, and inspect for damage or wear. Plates should be flat and smooth. Plates should not show heat discoloration. Paper material on friction plates should be intact and grooved. If any damage is detected, replace friction and divider plates as a set.
- 17) Remove clutch spacer, item 202.
- 18) Pull drum coupling, item 302, off splined end of cable drum, item 500.
- 19) Pry bearing holder, item 222, along with spring pin, item 223, out of free fall housing, item 200.
- 20) Remove journal bearing, item 510, from bore in cable drum and inspect for damage or excessive wear.
- 21) Remove and discard oil seal, item 505, and back-up washer, item 506.

All parts have now been removed from inside the free fall assembly. If further disassembly is required, proceed as follows:

- 1) For ease of working on the rest of the unit, set winch upright on free fall housing. Remove pipe nipple, item 181, along with pipe coupling, item 179, from hole in base, item 550. Remove two winch base halves, item 550 and 552, by removing the 28 hex capscrews, item 551, and lockwashers, item 553, which attach winch base to winch assembly.
- 2) Remove access plug, item 734, using a 1/2-13 NC bolt (motor adaptor bolt, item 537, works nicely), from inside brake housing, item 700, and discard O-ring, item 735. Remove six hex head capscrews, item 537, along with lockwashers, item 541, from bearing flange, item 530, by rotating brake housing until access hole is over top of them. Brake housing, together with bearing flange and primary planet hub assembly, can now be lifted out of cable drum, item 500. Discard O-ring, item 539.
- 3) Remove free fall coupling, item 210, from inside cable drum.
- 4) Remove retaining ring, item 401, from inside of internal gear, item 430. Primary planet hub assembly may now be slid out of internal gear and inspected for wear or damage. If primary planet gears, item 420, have to be removed, take off circlip, item 411, from planet pin, item 410, and press planet pin out of primary planet hub, item 400. Remove primary planet gear, item 420, together with loose rollers, item 423, and thrust washers, item 421.
- 5) Remove primary sun gear, item 440, from center of connecting shaft, item 600.
- 6) Take circlip, item 431, off end of connecting shaft and slide internal gear, item 430, along with internal gear spacer, item 434, off of connecting shaft spline.



# SERVICE INSTRUCTIONS CONTINUED

- 7) Connecting shaft, item 600, may now be pulled out of brake housing, and O-ring, item 601, discarded. Inspect needle bearing, item 603, and remove and replace if necessary.
- 8) To separate bearing flange, item 530, and brake housing, item 700, use a standard bearing puller or insert two heel bars in the slot between bearing flange and brake housing and pry brake housing out of ball bearing, item 533.
- 9) Remove internal retaining ring, item 534, to remove ball bearing, item 533. Remove and discard oil seal, item 531.
- 10) To separate free fall housing, item 200, and cable drum, item 500, first remove external circlip, item 513, off end of cable drum, then insert two heel bars in slot between final drive housing and cable drum and pry cable drum out of ball bearing, item 103.
- 11) Remove internal retaining ring, item 104, to remove ball bearing, item 103. Remove and discard oil seal, item 105 (this seal separates interior of free fall housing and interior of cable drum).

The PULLMASTER Model M25 with free fall has now been completely disassembled.

## REASSEMBLY

Thoroughly clean all parts. Use only new, well-greased O-rings and oil seals. Unless otherwise specified, torque fasteners per BOLT TORQUE CHART at back of manual. If the entire winch was disassembled, start by reassembling the free fall end (without the metering pump) first. Turn the cable drum up on end, so that the splined end is up.

### REASSEMBLY OF FINAL DRIVE:

Reassemble final drive end of winch as follows:

- 1) Insert new back-up washer, item 506, and new oil seal, item 505, together into bore in cable drum, until back-up washer stops against edge in bore (the second edge).
- 2) Carefully press journal bearing, item 510, into bore of cable drum until it comes into contact with the first edge.
- 3) If free fall housing was removed, press in new oil seal, item 105, and bearing, item 103, if removed. Re-install circlip, item 104.
- 4) Press free fall housing, item 200, onto splined end of cable drum, and install circlip, item 513.
- 5) Press bearing holder, item 222, along with spring pin, item 223, into free fall housing, item 200, turned so that pin lines up with slot in the top of bore.
- 6) Slide drum coupling, item 302, onto spline of cable drum.
- 7) Gently tap clutch connecting shaft, item 220, with two bearings, item 215, into place over bearing holder, item 222.
- 8) Set clutch spacer, item 202, into free fall housing, and place a divider plate, item 204, against it, lining up teeth with those inside of free fall housing.



**DANGER**

**INCORRECT ASSEMBLY OF THE FRICTION PLATE AND DIVIDER PLATE STACK WILL REDUCE BRAKING CAPACITY AND ALLOW THE LOAD TO DROP, CAUSING PROPERTY DAMAGE, SEVERE INJURY OR DEATH. REASSEMBLE PER INSTRUCTIONS.**

# SERVICE INSTRUCTIONS CONTINUED

- 9) Place brake plate, item 206, against divider plate, lining up teeth onto teeth of clutch connecting shaft, item 220. Alternate remaining divider and brake plates, finishing stack with a divider plate.
- 10) Install new, well-greased O-ring, item 233, into O-ring groove in free fall housing, item 200. Install new, well-greased O-ring, item 231, onto clutch piston, item 230.
- 11) Carefully press clutch piston, item 230, into free fall housing, item 200. If a hoist is available, piston can be supported using two 5/8 -11NC eyebolts.
- 12) Place 88 springs, item 232, into holes in clutch piston.
- 13) Install new, well-greased O-ring, item 213, into groove on end of spring retainer, item 212. Slide spring retainer, complete with bearing retainer, item 214, onto bearing, item 215.
- 14) Fasten spring retainer to free fall housing using 16 socket head capscrews, item 207, along with 16 high collar lockwashers, item 217. Fasten capscrews, one turn at a time, to compress 88 springs.
- 15) Slide final internal gear, item 330, onto spline of clutch connecting shaft, item 220, and fasten with circlip, item 331.
- 16) Install final sun gear, item 340, through journal bearing, item 510, and twist to engage spline with free fall coupling, item 210.
- 17) Install final planet assembly into clutch connecting shaft, item 220, and engage spline of drum coupling, item 302, as well as gears of final internal gear, item 330, and final sun gear, item 340. (Using two 5/8 -11NC eyebolts screwed into final planet hub, item 300, to suspend planet assembly, greatly assists in this operation.)
- 18) Install new, well-greased O-ring, item 213, on end of spring retainer, item 212, and place end cover, item 240, over top. Fasten in place with 16 hex head capscrews, item 537, and lockwashers, item 541. Turn winch over with open end of cable drum facing up. (To keep winch secure and to help prevent it from falling over, we recommend sitting end cover, item 240, upon a piece of steel tube of approximately 12 inch ID and 6 inch deep.)

## REASSEMBLY OF PRIMARY DRIVE:

Reassemble primary drive as follows:

- 1) Insert free fall coupling, item 210, with circlip, item 343, into cable drum, item 500, and engage spline with final sun gear, item 340.
- 2) Press bearing, item 533, into bearing flange, item 530, and secure with bearing retainer, item 534. Carefully press new, well greased oil seal, item 531, into other side of bearing flange, and press assembly onto hub of brake housing, item 700.
- 3) Press new, well-greased oil seal, item 607, into connecting shaft, item 600. If a backup washer is included in your seal kit, it should be installed together with and behind the oil seal.
- 4) Install new, well greased O-ring, item 601, onto connecting shaft, item 600, and insert through bore in brake housing. Slide internal gear, item 430, along with spacer, item 434, onto spline of connecting shaft and fasten with circlip, item 431.
- 5) Reassemble primary planet hub assembly. Use grease to temporarily hold 20 loose rollers, item 423, in bore of planet gear, item 420. Verify placement of sun gear stopper, item 444. Position thrust washers, item 421, on either side of planet gear and press planet pin, item 410, into final planet hub, item 400. Retain with circlip, item 411.
- 6) Insert primary sun gear, item 440, between three planet gears and insert sun gear shaft into connecting shaft, engaging planet gears with internal gear. Fasten with retaining ring, item 401.
- 7) Insert sun gear, item 440, into center of three planet gears, item 420. Place planet assembly into internal gear, item 430. Insert retaining ring, item 401, into internal gear, item 430.

# SERVICE INSTRUCTIONS CONTINUED

- 8) Place new, well-greased O-ring, item 539, onto bearing flange, item 530. Brake housing with primary reduction attached may now be lowered into cable drum, item 500.
- 9) Rotate brake housing to line up access holes and fasten bearing flange using six capscrews, item 537, and lockwashers, item 541.
- 10) Install new, well-greased O-ring, item 735, into access plug, item 734. Install access plug into access hole inside brake housing.
- 11) Attach two base halves, items 550 and 552, using 28 capscrews, item 551, and lockwashers, item 553.
- 12) Insert pipe nipple, item 181, with pipe coupling, item 179, attached, through hole in base and screw tightly into free fall housing.

## REASSEMBLY OF BRAKE HOUSING ASSEMBLY:

Reassemble brake housing assembly as follows:

- 1) Install sprag clutch, item 723, into bore of brake hub, item 720. Position sprag clutch aligners, item 722 and item 724, on either side of brake hub. Carefully slide motor drive shaft, item 730, into brake hub assembly and secure with circlip, item 719. Verify that circlips, item 727 and item 731, are installed on motor drive shaft.

**IMPORTANT:** For proper brake function, verify that the sprag clutch is installed correctly. When viewed from the motor end, the motor drive shaft of a clockwise hoisting winch must turn freely clockwise and lock in the counter clockwise direction.

- 2) Install motor drive shaft assembly into brake housing and carefully twist shoulder of shaft through oil seal, item 607. Twist slightly more to engage spline with primary sun gear, item 440.




**DANGER**

**INCORRECT ASSEMBLY OF THE FRICTION PLATE AND DIVIDER PLATE STACK WILL REDUCE BRAKING CAPACITY AND ALLOW THE LOAD TO DROP, CAUSING PROPERTY DAMAGE, SEVERE INJURY OR DEATH. REASSEMBLE PER INSTRUCTIONS.**

- 3) Install brake spacer, item 712, into brake housing, item 700. Starting and finishing with a divider plate, alternately install seven divider plates, item 714, and six friction plates, item 715.
- 4) Install new, well-greased O-rings, item 751 and item 753, into glands of piston, item 750. Carefully install brake piston in brake housing.
- 5) Install 14 brake springs, item 752, in brake piston using hole pattern shown below.

## HOLE PATTERN FOR BRAKE SPRING INSTALLATION:

LOCATION OF  
BRAKE SPRINGS  
(FOURTEEN SPRINGS,  
TWENTY HOLES)

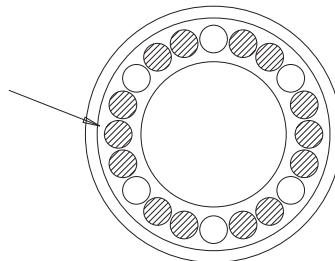

SI1007 - M25/50

# SERVICE INSTRUCTIONS CONTINUED

- 6) Liberally grease three new O-rings, item 801, and install in to recesses on motor adaptor, item 800. Install new, well-greased O-ring, item 707, on flange of motor.
- 7) Slide hydraulic motor assembly on splined end of motor drive shaft, item 730, and line up pressure transfer holes of brake housing and motor adaptor. Tighten 12 capscrews, item 537, and lockwashers, item 541, one turn at a time to evenly compress springs.

## REASSEMBLY OF HYDRAULIC MOTOR:

If hydraulic motor was disassembled, the following procedure should be followed for reassembly:

- 1) Clean all parts thoroughly before reassembly and apply grease liberally to all seals. Use only new seals (seal kit Part No. 23117) for hydraulic motor.
- 2) Install two new teflon seals, item 887, on each thrust plate, item 885. Press one of the thrust plates, together with two teflon seals, onto bearings, item 875, installed in motor adaptor, item 800.
- 3) Install new, well-greased gasket seal, item 869, on each side of gear housing, item 861. Slide gear housing together with gasket seals, onto motor adaptor, lined up on two dowel pins. Tap on tight using a soft-headed hammer.
- 4) Install gear set, item 881, in gear housing (the longer gear with the internal spline goes into the top position).
- 5) Press other thrust plate, complete with two new teflon seals, onto bearings installed in port end cover.
- 6) Install port end cover, item 870, together with two bearings, item 875, and new ring seal, item 877, onto gear housing, lined up on two dowel pins, item 865. Tap on tight using a soft-headed hammer. Install and lightly torque eight hex capscrews, item 951, and lockwashers, item 953, to approximately 50 ft-lb (70 Nm).
- 7) Plumb winch assembly to a hydraulic supply and torque motor capscrews according to the following procedure:
  - Ensure that circulation supply flow is being supplied to the brake housing.
  - Run the winch , with no load, in the hoisting direction at reduced speed (approximately 30% of maximum hydraulic volume).
  - With winch running, evenly tighten eight capscrews, item 951, to 200 ft-lb (270 Nm).
  - Test motor operation by running winch at full speed in both directions.

**IMPORTANT:** Before operating the winch, add lubricating oil through the cable drum oil fill port. (Refer to INSTALLATION INSTRUCTIONS for location of fill port. Refer to APPENDIX A for oil volume required.)

To ensure proper reassembly, run the winch in both directions without load.



**DANGER**

**LIFTING A LOAD WITH A NEWLY SERVICED WINCH WILL ENABLE AN INSTALLATION OR SERVICE PROBLEM TO GO UNDETECTED AND ALLOW THE LOAD TO DROP CAUSING PROPERTY DAMAGE, SEVERE INJURY OR DEATH. TO ENSURE PROPER REINSTALLATION, REFER TO PROCEDURES AND TESTS DESCRIBED IN "INSTALLATION" AND "OPERATING INSTRUCTIONS".**

# RECOMMENDED MAINTENANCE

Winch gear train lubricating oil should be changed after the initial six months or 50 hours of operation, whichever comes first. Lubricating oil should then be changed every 12 months or 500 operating hours, whichever comes first.

Hydraulic system fluid should be changed at least once every 12 months.

For optimum performance over an extended period of time, the following preventive maintenance service should be done every 12 months or 500 operating hours (whichever comes first):

- 1) Disconnect all hydraulic hoses and remove the winch from its mounting.
- 2) Disassemble the winch as per instructions.
- 3) Discard and replace all O-rings and oil seals.
- 4) Clean all parts and inspect for wear and damage as per instructions. Replace worn or damaged parts as required.
- 5) Reassemble the winch as per instructions.
- 6) Follow INSTALLATION and OPERATING INSTRUCTIONS when returning winch to its mounting.

When ordering parts for the PULLMASTER Model M25 planetary winch with free fall, always quote the complete model and serial number of the unit.

**MODEL NO.** \_\_\_\_\_

**SERIAL NO.** \_\_\_\_\_

PULLMASTER WINCH CORPORATION reserves the right to change specifications and the design of PULLMASTER planetary winches at any time without prior notice and without incurring any obligations.

# PARTS REFERENCE - FINAL DRIVE

ITEM NO.	QTY.	PART NO.	DESCRIPTION
103	1	25332	BALL BEARING 120 x 180 x 28 # 6024
104	1	20460	BEARING RETAINER
105	1	25148	OIL SEAL
121	2	25237	PIPE PLUG 3/4 - 14 NPT
126	1	20756	PLANET HUB STOPPER
171	1	**	**
179	1	25641	PIPE COUPLING 3/8 NPT
181	1	21789	PIPE NIPPLE 3/8 NPT X 7" L
183	1	**	**
183A	1	25031	PIPE PLUG 1/4 - 18 NPT
185	1	**	**
197	6	25265	CAPSCREW - HEX HEAD 7/16 - 14NC X 1.25 GRADE 5
199	6	25328	LOCKWASHER 7/16"
200	1	20939	FREE FALL HOUSING
201	1	25481	PIPE PLUG 1 - 11 1/2 NPT
202	1	20766	CLUTCH SPACER
203	6	25085	PIPE PLUG 3/8 - 18 NPT
204	10	20760	DIVIDER PLATE
206	9	20759	FRICTION PLATE
207	16	25517	CAPSCREW - SOCKET HEAD 5/8 - 11NC X 2.25 GRADE 5
210	1	*	FREE FALL COUPLING
212	1	20758	SPRING RETAINER
213	2	25592	O-RING -387 18"ID 3/16"CS
214	1	20461	BEARING RETAINER
215	2	25575	BALL BEARING 160 X 200 X 20 #61832
216	1	**	**
217	16	25099	LOCKWASHER 5/8" HI-COLLAR
220	1	20762	CLUTCH CONNECTING SHAFT
222	1	20768	BEARING HOLDER
223	1	25599	SLOTTED SPRING PIN 3/16" DIA X 3/4" L
230	1	20749	CLUTCH PISTON
231	1	25594	O-RING -90 DURO -465 18"ID 1/4"CS
232	88	20761	CLUTCH SPRING
233	1	25593	O-RING -90 DURO -463 17"ID 1/4"CS
236	1	26088	SLOTTED SPRING PIN 3/32" DIA X 3/4" L
240	1	20763	END COVER
241	1	25136	O-RING -159 5"ID 3/32"CS
242	1	**	**
248	1	22380	METERING PUMP CONNECTOR
249	1	25379	SLOTTED SPRING PIN 5/32" X 1" L
290	1	22379	STOPPER
300	1	20748	FINAL PLANET HUB
302	1	20767	DRUM COUPLING
310	3	20406	FINAL PLANET PIN
311	3	25199	CIRCLIP ROTOR CLIP SH-168
313	3	25199	CIRCLIP ROTOR CLIP SH-168
320	3	20405	FINAL PLANET GEAR
321	6	25167	THRUST WASHER TORRINGTON # TRB 2840
323	72	25297	LOOSE ROLLER TORRINGTON #G613 - Q
330	1	20755	FINAL INTERNAL GEAR
331	1	25614	CIRCLIP ROTOR CLIP SH-625
340	1	20765	FINAL SUNGEAR
343	1	25242	CIRCLIP ROTOR CLIP SH-206
344	1	20450	SUNGEAR STOPPER
500	1	*	CABLE DRUM
502	1	20423	CABLE ANCHOR
503	1	25032	PIPE PLUG 1/2 - 14 NPT
505	1	25597	OIL SEAL
506	1	20824	BACK-UP WASHER FOR OIL SEAL #25597
510	1	20825	JOURNAL BEARING
513	1	25337	CIRCLIP ROTOR CLIP SH-475
537	16	25081	CAPSCREW - HEX HEAD 1/2 - 13NC X 1.50 GRADE 5
541	16	25014	LOCKWASHER 1/2"
550	1	*	BASE
551	28	25346	CAPSCREW - HEX HEAD 5/8 - 11NC X 1.75 GRADE 5
552	1	*	BASE
553	28	25359	LOCKWASHER 5/8"
703	1	25347	PLASTIC CAPLUG 1 -11.5 NPT


\* These parts vary with drum code.  
Refer to APPENDIX B.

\*\* These parts vary with free fall option.  
Refer to APPENDIX C.

Refer to PAGE 30 for winch seal kit and PAGE 36 for ASSEMBLY DRAWING.

# FINAL DRIVE GROUP

G1008-F

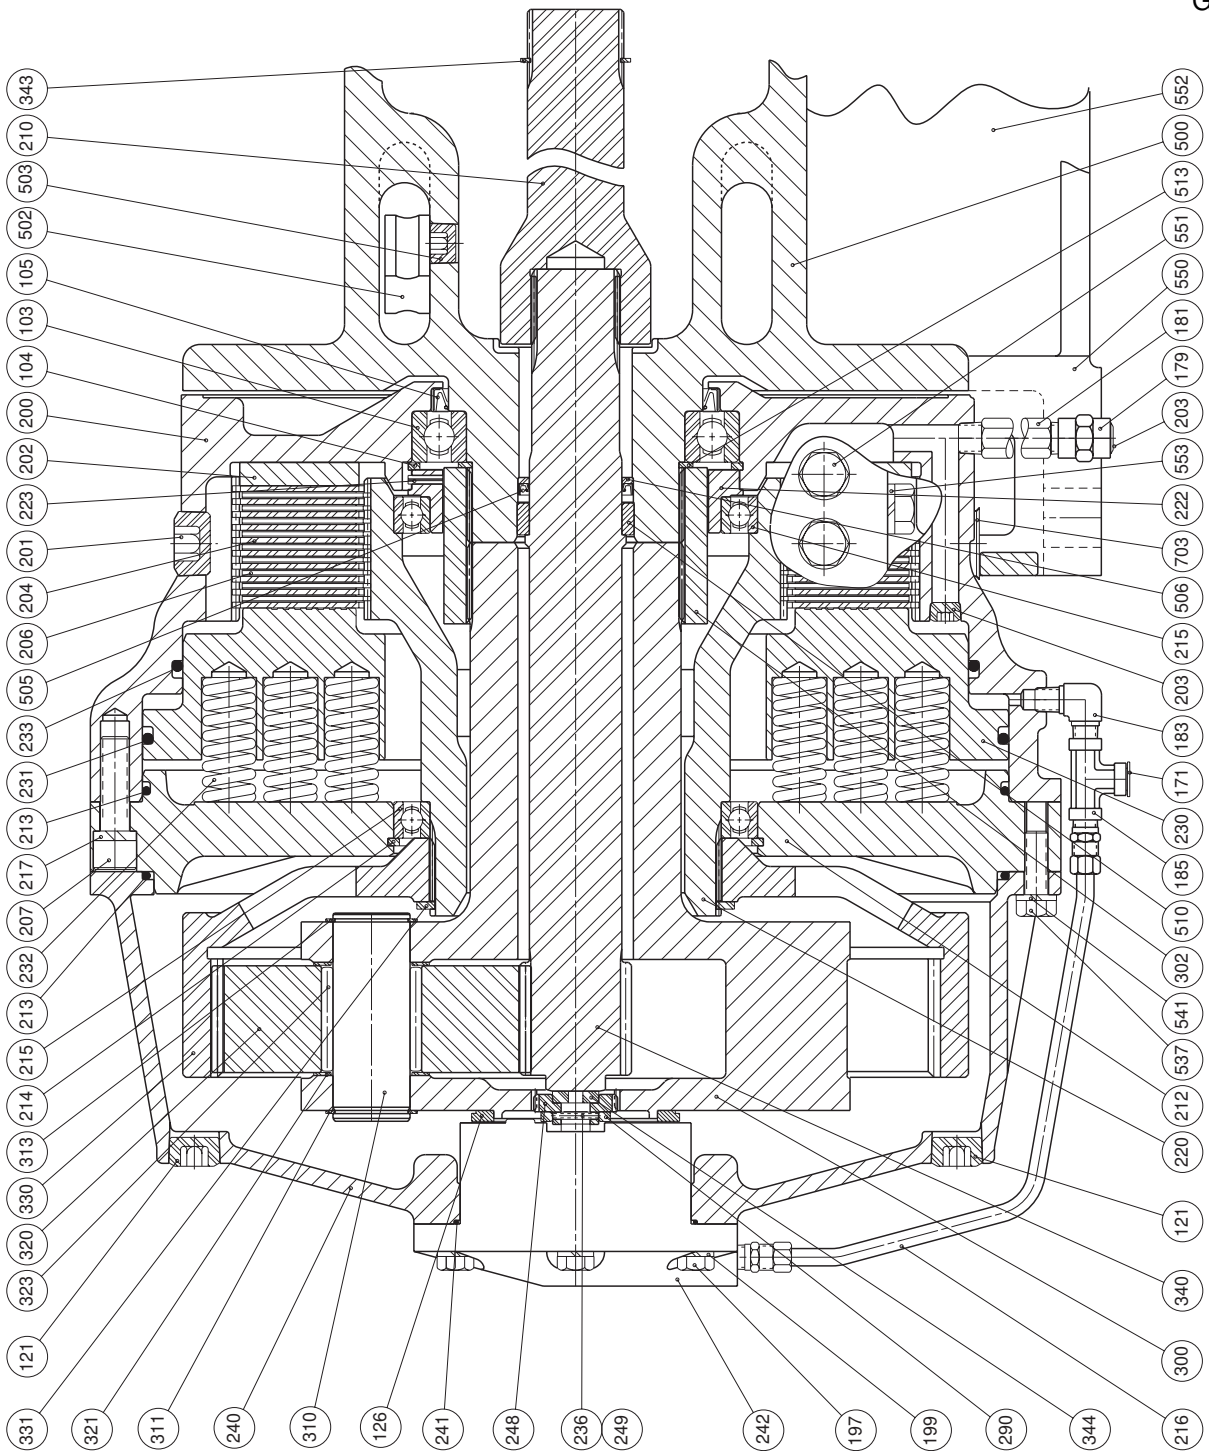

Metering pump connection is shown for clockwise hoisting winch. For counterclockwise hoisting, connect metering tube to alternate port on metering pump and use metering tube, item 216A. Refer to Appendix E.

Group drawings may reference more parts than are actually present in a specific assembly. Parts that are referenced on the drawing but are not on the PART REFERENCE list should be ignored.

# PARTS REFERENCE - BRAKE GROUP


ITEM NO.	QTY.	PART NO.	DESCRIPTION
400	1	20404	PLANET HUB
401	1	20417	RETAINING RING
410	3	20369	PLANET PIN
411	3	25004	CIRCLIP ROTOR CLIP C-87
413	3	25091	CIRCLIP ROTOR CLIP SH-87
420	3	20370	PLANET GEAR
421	6	25068	THRUST WASHER TORRINGTON # TRA 1423
423	60	25270	LOOSE ROLLER 5/32 X 1.25 TOR. #E151 - Q
430	1	20411	INTERNAL GEAR
431	1	25338	CIRCLIP ROTOR CLIP SH-300
434	1	20452	SPACER
440	1	20414	SUNGEAR
444	1	20419	SUNGEAR STOPPER
530	1	*	BEARING FLANGE
531	1	25148	OIL SEAL
533	1	25333	BALL BEARING #6026
534	1	20461	BEARING RETAINER
537	6	25081	CAPSCREW - HEX HEAD 1/2 - 13NC X 1.50 GRADE 5
539	1	25109	O-RING -269 8-3/4" ID 1/8" CS
541	6	25014	LOCKWASHER 1/2"
600	1	20445	CONNECTING SHAFT
601	1	25341	O-RING -239 3-5/8" ID 1/8" CS
603	1	25334	NEEDLE BEARING TORRINGTON #B2812
606	1	21086	BACKUP WASHER
607	1	25345	OIL SEAL
700	1	20447	BRAKE HOUSING
703	1	25347	PLASTIC CAPPLUG 1 NPT
707	1	25339	O-RING -278 12" ID 1/8" CS
712	1	20451	BRAKE SPACER
713	6	25305	DIVIDER PLATE
715	5	25304	FRICITION PLATE
719	1	25336	CIRCLIP ROTOR CLIP SH-187
720	1	20446	BRAKE HUB
722	1	20455	SPRAG CLUTCH ALIGNER
723	1	25303	SPRAG CLUTCH BORG WARNER #140373 B
724	1	20421	SPRAG CLUTCH ALIGNER
727	1	25335	CIRCLIP ROTOR CLIP SH-196
734	1	20422	PLUG
735	1	25344	O-RING -123 1-3/16" ID 3/32" CS
750	1	20397	PISTON
751	1	25343	O-RING -90 DURO -451 11" ID 1/4" CS
752	14	20413	BRAKE SPRING
753	1	25342	O-RING -90 DURO -452 11-1/2" ID 1/4" CS
		23115	WINCH SEAL KIT, CONSISTS OF ITEMS: 105, 213, 231, 233, 241, 505, 506, 531, 539, 601, 606, 607, 707, 735, 751, 753, AND 801
			* This part varies with drum code. Refer to APPENDIX B.

Refer to PAGE 36 for ASSEMBLY DRAWING.



# BRAKE GROUP

G1001-B

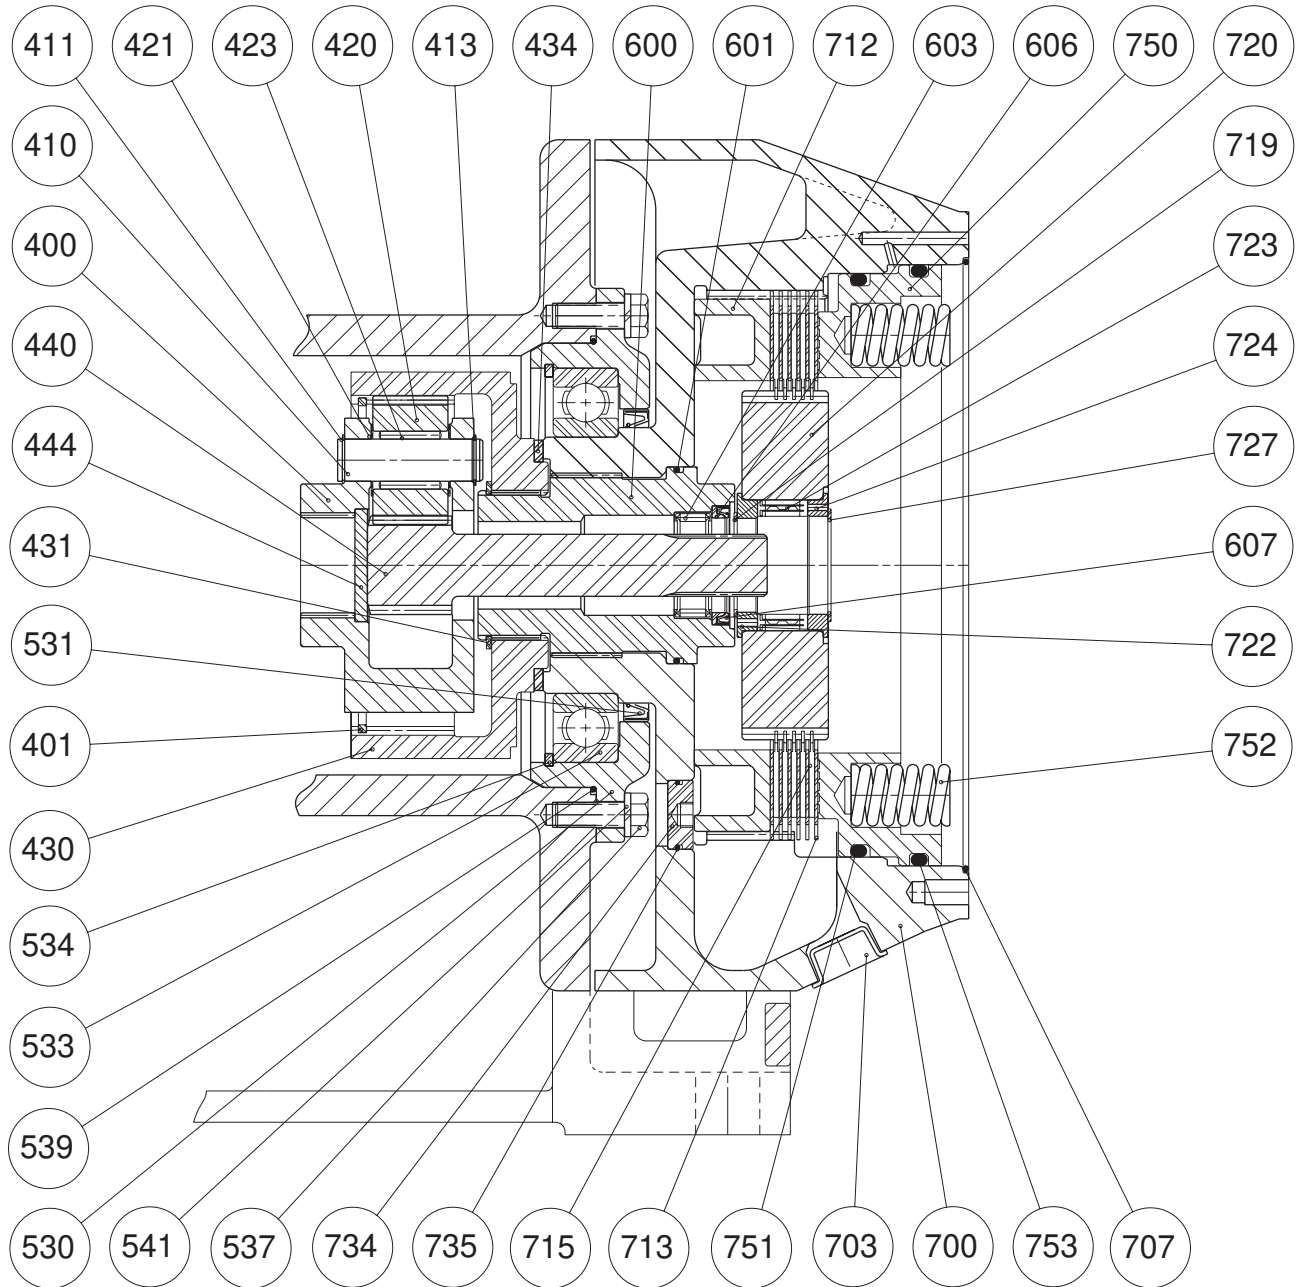

Group drawings may reference more parts than are actually present in a specific assembly. Parts that are referenced on the drawing but are not on the PART REFERENCE list should be ignored.


# PARTS REFERENCE - MOTOR GROUP

ITEM NO.	QTY.	PART NO.	DESCRIPTION
537	12	25081	CAPSCREW - HEX HEAD 1/2 - 13 NC X 1.5 GRADE 5
541	12	25014	LOCKWASHER 1/2"
730	1	20415	MOTOR DRIVE SHAFT
731	1	25288	CIRCLIP ROTOR CLIP C-112
800	1	20401	MOTOR ADAPTOR
801	3	25127	O-RING -90 DURO -013 7/16" ID 1/16" CS
802	1	*	*
805	2	25040	PIPE PLUG 1/8 - 27 NPT
806	1	*	*
807	1	*	*
809	1	*	*
813	1	25031	PIPE PLUG 1/4 - 18 NPT
861	1	25350	GEAR HOUSING
865	4	25356	DOWEL PIN
869	2	25348	SEAL - GASKET
870	1	21761	PORT END COVER
875	4	25352	BEARING - ROLLER
877	2	25646	SEAL - RING
881	1	25645	GEAR SET
885	2	25644	THRUST PLATE
887	4	25647	SEAL - TEFLON
899	2	25031	PIPE PLUG 1/4 - 18 NPT
929	1	*	*
950 <sup>x</sup>	1	*	SUB - ASSY MOTOR
951	8	25357	CAPSCREW - HEX HEAD 5/8 X 6.75 GRADE 5
953	8	25325	WASHER
955	2	25559	PLASTIC CAPPLUG 2.0"
		23117	MOTOR SEAL KIT, CONTAINS ITEMS: 869, 877, AND 887
			* These part numbers and descriptions vary according to brake code. Refer to APPENDIX D.
			* ITEM 950, MOTOR SUB-ASSY, CONSISTS OF ITEMS: 800, 802, 805, 806, 807, 809, 813, 861, 865, 869, 870, 875, 877, 881, 885, 887, 899, 929, 951, 953 AND 955

Refer to PAGE 30 for winch seal kit and PAGE 36 for ASSEMBLY DRAWING.

# MOTOR GROUP


G1002-D

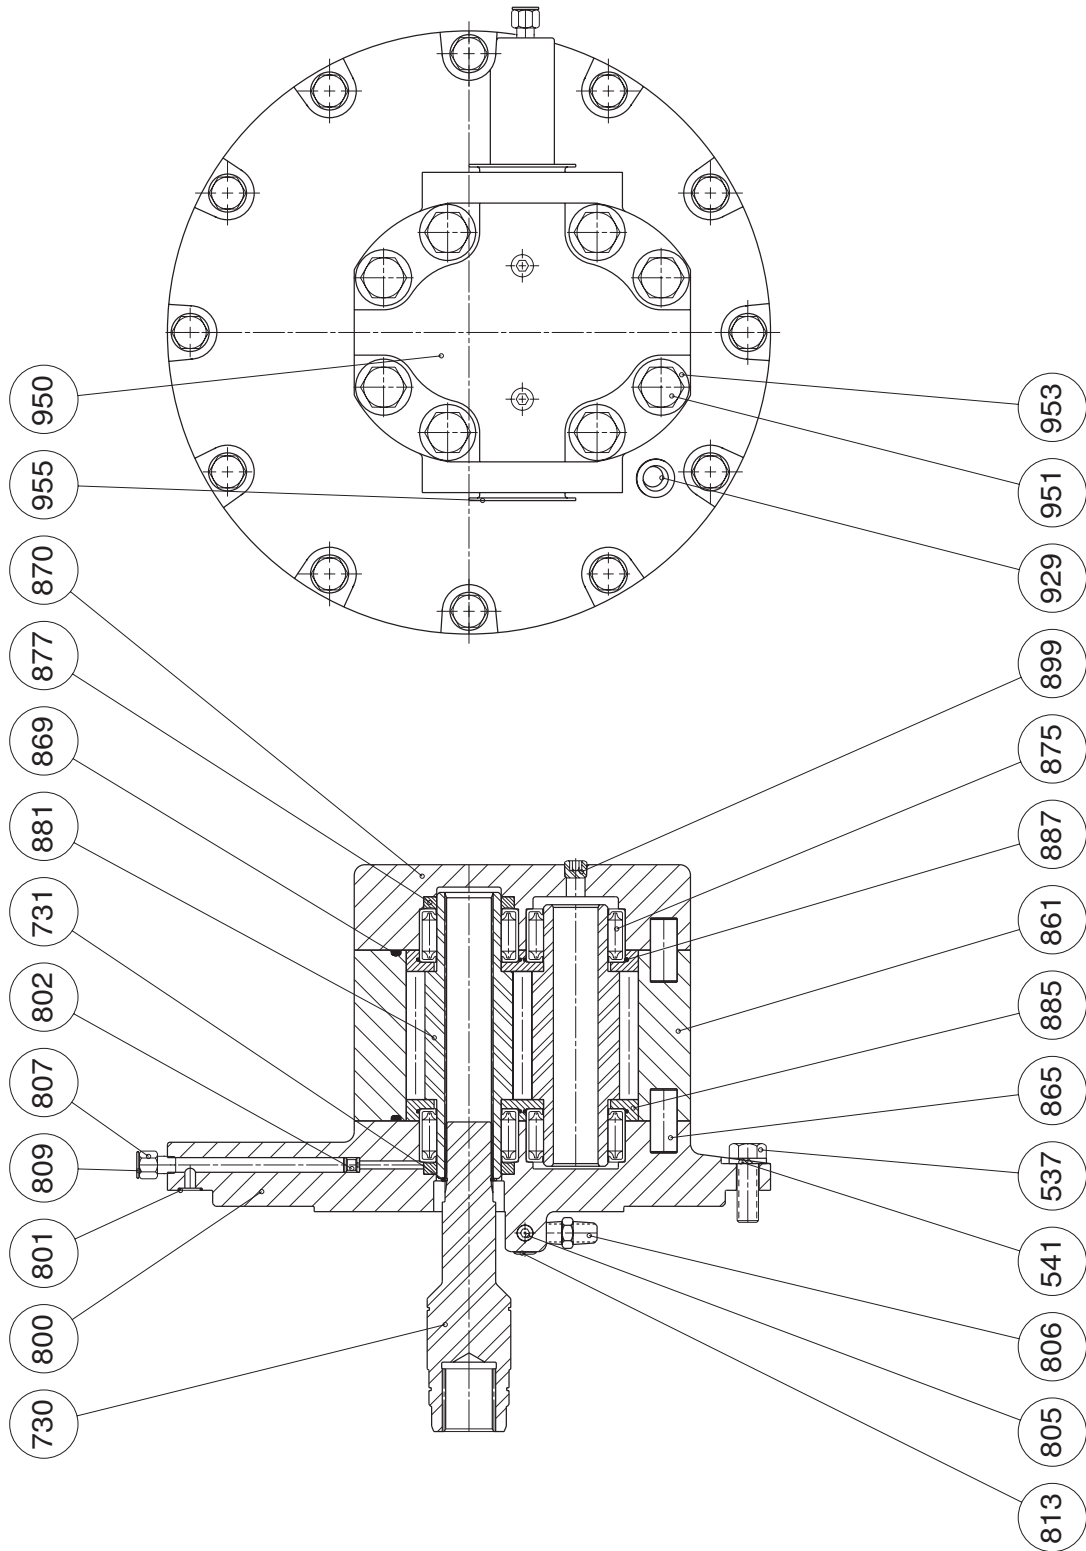

Group drawings may reference more parts than are actually present in a specific assembly. Parts that are referenced on the drawing but are not on the PART REFERENCE list should be ignored.

# INSTALLATION DIMENSIONS

I1004-1-E

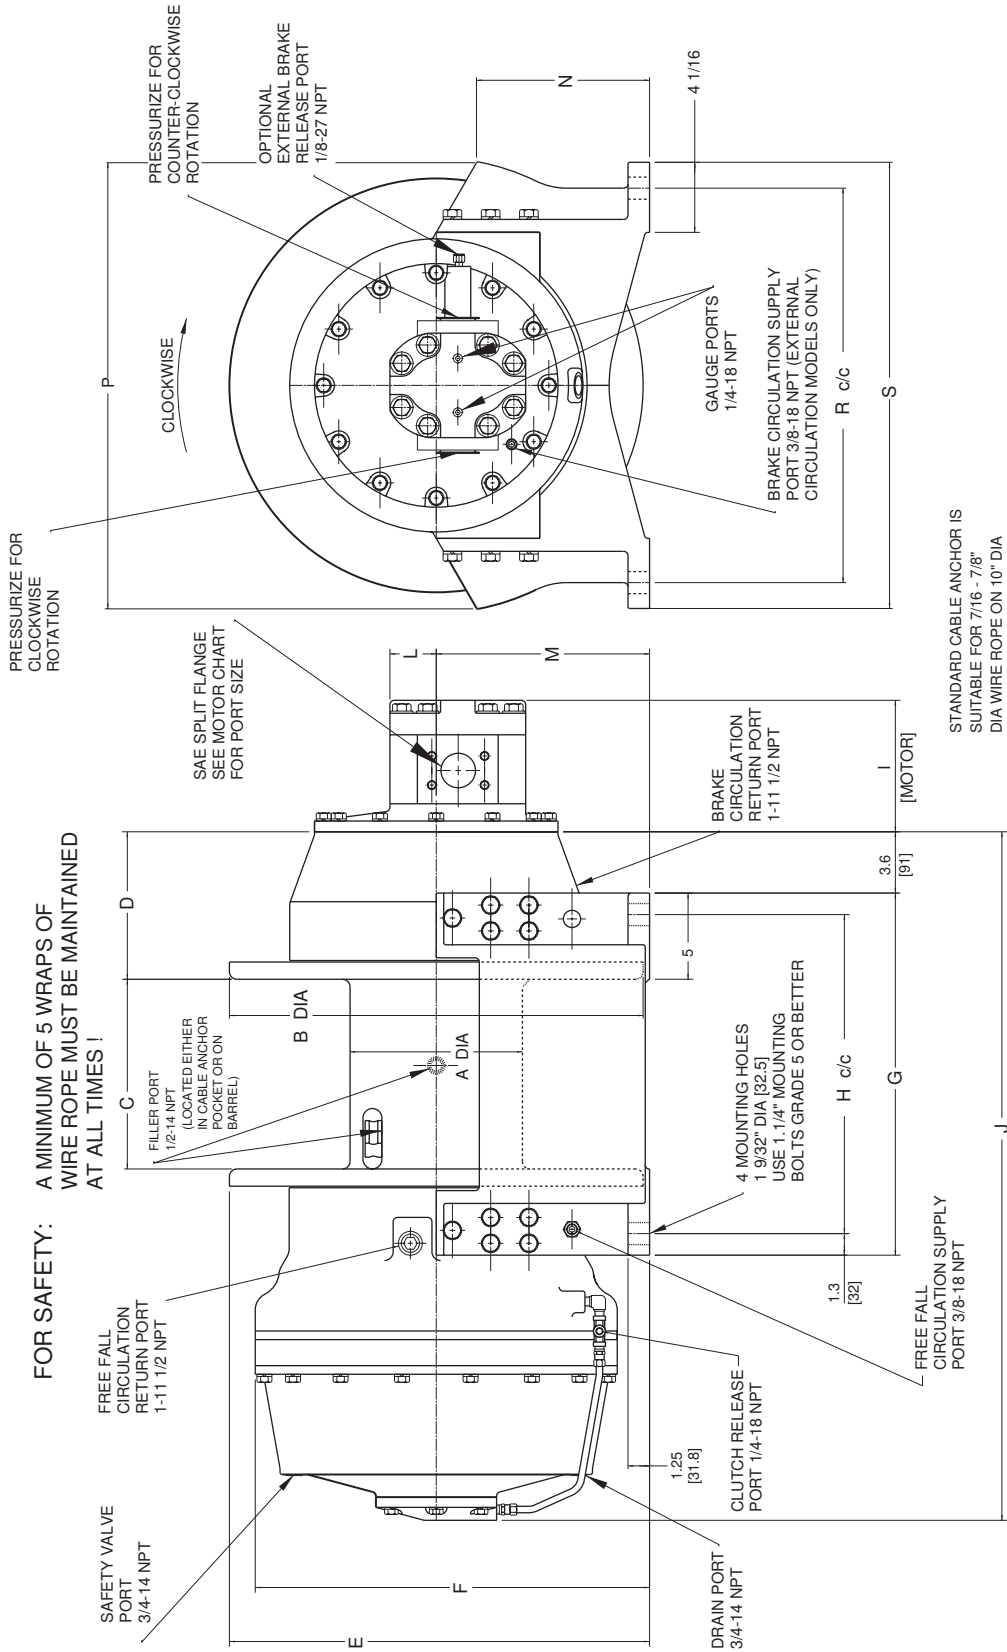

# INSTALLATION DIMENSIONS

**Dimensions in inches  
(Dimensions in millimeters)**


DRUM CODE	A	B	C	D	E	F	G	H	J	M	N	P	R	S
-1	10.0 (254)	17.0 (432)	11.0 (279)	8.6 (218)	19.9 (505)	21.9 (556)	21.0 (533)	18.500 (469.90)	39.9 (1014)	11.38 (289)	8.9 (225)	20.8 (527)	17.750 (450.85)	20.8 (527)
-2	10.0 (254)	24.0 (610)	11.0 (279)	8.6 (218)	24.4 (619)	22.9 (581)	21.0 (533)	18.500 (469.90)	39.9 (1014)	12.38 (314)	10.0 (254)	25.9 (657)	22.875 (581.03)	25.9 (657)
-3	10.0 (254)	24.0 (610)	17.0 (432)	8.6 (218)	24.4 (619)	22.9 (581)	27.0 (686)	24.500 (622.30)	45.9 (1167)	12.38 (314)	10.0 (254)	25.9 (657)	22.875 (581.03)	25.9 (657)
-4	10.0 (254)	24.0 (610)	22.0 (559)	8.6 (218)	24.4 (619)	22.9 (581)	32.0 (813)	29.500 (749.30)	50.9 (1294)	12.38 (314)	10.0 (254)	25.9 (657)	22.875 (581.03)	25.9 (657)
-5	10.0 (254)	34.0 (864)	29.0 (737)	9.1 (230)	34.4 (875)	27.9 (708)	40.0 (1016)	37.500 (952.50)	58.9 (1497)	17.38 (441)	13.6 (345)	35.6 (905)	28.500 (723.90)	31.5 (800)
-10	10.0 (254)	17.0 (432)	29.0 (737)	9.1 (230)	19.9 (505)	21.9 (556)	40.0 (1016)	37.500 (952.50)	58.9 (1497)	11.38 (289)	8.9 (225)	20.8 (527)	17.750 (450.85)	20.8 (527)
-14	14.5 (368)	24.0 (610)	17.0 (432)	8.6 (218)	24.4 (619)	22.9 (581)	27.0 (686)	24.500 (622.30)	45.9 (1167)	12.38 (314)	10.0 (254)	25.9 (657)	22.875 (581.03)	25.9 (657)
-17	14.4 (368)	24.0 (610)	11.0 (279)	8.6 (218)	24.4 (619)	22.9 (581)	21.0 (533)	18.500 (469.90)	39.9 (1014)	12.38 (314)	10.0 (254)	25.9 (657)	22.875 (581.03)	25.9 (657)
-31	13.0 (330)	24.0 (610)	17.0 (432)	8.6 (218)	24.4 (619)	22.9 (581)	27.0 (686)	24.500 (622.30)	45.9 (1167)	12.38 (314)	10.0 (254)	25.9 (657)	22.875 (581.03)	25.9 (657)

**Dimensions in inches  
(Dimensions in millimeters)**

HYDRAULIC MOTORS									
COMMERCIAL WM76 SERIES					COMMERCIAL M365 SERIES				
MOTOR CODE	GEAR WIDTH	MOTOR PORT SIZE SAE SPLIT FLANGE	I	L	MOTOR CODE	GEAR WIDTH	MOTOR PORT SIZE SAE SPLIT FLANGE	I	L
-86	3.00 (76.2)	2.0	7.6 (194)	2.7 (68)	-42	2.50 (63.5)	1.5	8.0 (203)	2.5 (64)
-87	2.75 (69.9)		7.4 (187)	2.7 (68)	-101	2.25 (57.2)		7.8 (197)	2.5 (64)
-88	2.50 (63.5)	1.5	7.1 (181)	2.7 (68)	-102	2.00 (50.8)		7.5 (191)	2.5 (64)
-89	2.25 (57.2)		6.9 (175)	2.7 (68)					
-90	2.00 (50.8)		6.6 (168)	2.7 (68)					
-91	1.75 (44.5)	1.25	6.4 (162)	2.7 (68)					
-92	1.50 (38.1)		6.1 (156)	2.7 (68)					
-93	1.25 (31.8)		5.9 (149)	2.7 (68)					
-94	1.00 (25.4)	1.00	5.6 (143)	2.7 (68)					

# ASSEMBLY DRAWING

G1001-B & G1002-D & G1008-F

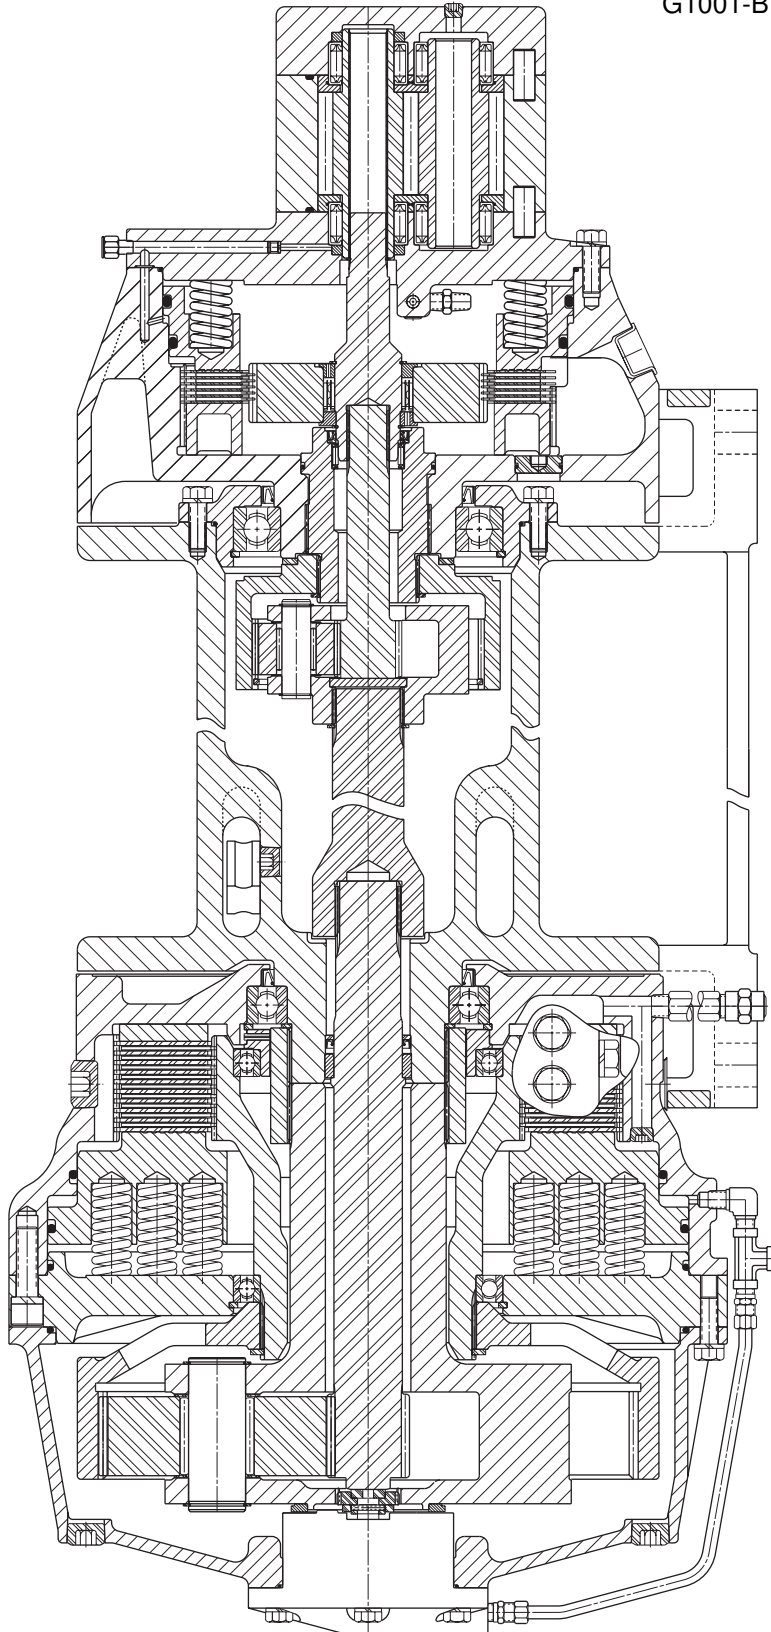

# APPENDIX A

DRUM CODE	CABLE DRUM SIZES INCHES (MILLIMETERS)			WIRE ROPE STORAGE FEET (METERS)			LINE PULL AT MAXIMUM PRESSURE - HOISTING*		HOISTING LINE SPEED AT MAXIMUM VOLUME*		MAXIMUM ALLOWABLE LOAD FOR CONTROLLED OR COMBINED FREE FALL POUNDS (KILONEWTONS)	LUBRICAT- ING OIL VOLUME REQUIRED  U.S. GALLONS (LITERS)
	BARREL	FLANGE	LENGTH	3/4 inch	7/8 inch	1 inch	BARE DRUM	FULL DRUM	BARE DRUM	FULL DRUM		
-1	10.0 (254)	17.0 (432)	11.0 (279)	210 (64)	140 (43)	91 (28)	25000 (111.2)	17629 (78.4)	140 (43)	198 (60)	7500 (33.4)	1.3 (4.9)
-2	10.0 (254)	24.0 (610)	11.0 (279)	515 (157)	398 (121)	264 (80)	25000 (111.2)	11821 (52.6)	140 (43)	295 (90)	7500 (33.4)	1.3 (4.9)
-3	10.0 (254)	24.0 (610)	17.0 (432)	796 (243)	615 (187)	408 (124)	25000 (111.2)	11821 (52.6)	140 (43)	295 (90)	7500 (33.4)	2.0 (7.6)
-4	10.0 (254)	24.0 (610)	22.0 (559)	1031 (314)	796 (243)	528 (161)	25000 (111.2)	11821 (52.6)	140 (43)	295 (90)	7500 (33.4)	2.6 (9.8)
-5	10.0 (254)	34.0 (864)	29.0 (737)	3189 (972)	2204 (672)	1689 (515)	25000 (111.2)	8427 (37.7)	140 (43)	412 (126)	7500 (33.4)	3.4 (12.8)
-10	10.0 (254)	17.0 (432)	29.0 (737)	555 (169)	370 (113)	241 (73)	25000 (111.2)	17629 (78.4)	140 (43)	198 (60)	7500 (33.4)	3.4 (12.8)
-14	14.5 (368)	24.0 (610)	17.0 (432)	647 (197)	468 (143)	344 (105)	17629 (78.4)	11845 (52.7)	197 (60)	294 (90)	5305 (23.6)	4.7 (17.8)
-17	14.5 (368)	24.0 (610)	11.0 (279)	419 (128)	303 (92)	223 (68)	17629 (78.4)	11845 (52.7)	197 (60)	294 (90)	5305 (23.6)	3.1 (11.7)
-31	13.0 (330)	24.0 (610)	17.0 (432)	705 (215)	523 (159)	397 (121)	19595 (87.2)	11837 (52.7)	178 (54)	295 (90)	5878 (26.1)	3.4 (12.8)

\* Performance specifications are based on standard hydraulic motor with 7/8 inch diameter rope.

# APPENDIX B

ITEM	210	500	530	550/552
DRUM CODE	FREE FALL COUPLING	CABLE DRUM	BEARING FLANGE	BASE
- 1	20751	20395	20402	20671
- 2	20751	20396	20402	20444
- 3	20752	20393	20402	20443
- 4	20753	20391	20402	20403
- 5	20754	20688	21841	20690
- 10	20754	20935	20402	20937
- 14	20752	20990	20402	20443
- 17	20751	21550	20402	20444
- 31	20752	21641	20402	20443



# APPENDIX C

ITEM NO.	DESCRIPTION	TYPE OF FREE FALL	
		CONTROLLED (C)	EMERGENCY (D)
171	PLASTIC CAPPLUG 1/4NPT	25395	N/A
183	PIPE ELBOW 1/4 NPT	25538	N/A
183	PLASTIC CAPPLUG 1/4 NPT	N/A	25395
185	PIPE TEE 1/4 NPT	25552	N/A
216	METERING TUBE	SEE APPENDIX D	N/A
242	METERING PUMP SUB-ASSEMBLY	SEE APPENDIX D	N/A
242	END CAP	N/A	22381


# APPENDIX D

ITEM NO.	PART DESCRIPTION	PART NUMBERS							
		BRAKE CODE							
		-3	-4	-5	-6	-7	-8	-9	-10
216	METERING TUBE ASSEMBLY	22612	22612	N/A	N/A	22612	22612	N/A	N/A
216A	METERING TUBE ASSEMBLY	N/A	N/A	22611	22611	N/A	N/A	22611	22611
242	METERING PUMP SUB-ASSEMBLY	22382	22382	22383	22383	22382	22382	22383	22383
802	SHUTTLE	N/A	20849	20849	N/A	N/A	20849	20849	N/A
806	CIRCULATION VALVE	20456	20456	20456	20456	N/A	N/A	N/A	N/A
806	1/4-18 NPT PIPE PLUG	N/A	N/A	N/A	N/A	25031	25031	25031	25031
807	1/8-27 NPT PIPE PLUG	25040	N/A	N/A	25040	25040	N/A	N/A	25040
807	1/8 NPT PIPE ADAPTOR	N/A	25622	25622	N/A	N/A	25622	25622	N/A
809	1/8 NPT CAPPLUG	N/A	25374	25374	N/A	N/A	25374	25374	N/A
929	3/8 NPT CAPPLUG	N/A	N/A	N/A	N/A	26276	26276	26276	26276
929	3/8-18 NPT PIPE PLUG	25085	25085	25085	25085	N/A	N/A	N/A	N/A
950	MOTOR (-86)	20504	22011	22012	20804	20505	21977	22013	20805

# APPENDIX E

SI 1046

CONNECT METERING TUBE, ITEM 216A,  
TO THIS PORT FOR CCW HOISTING

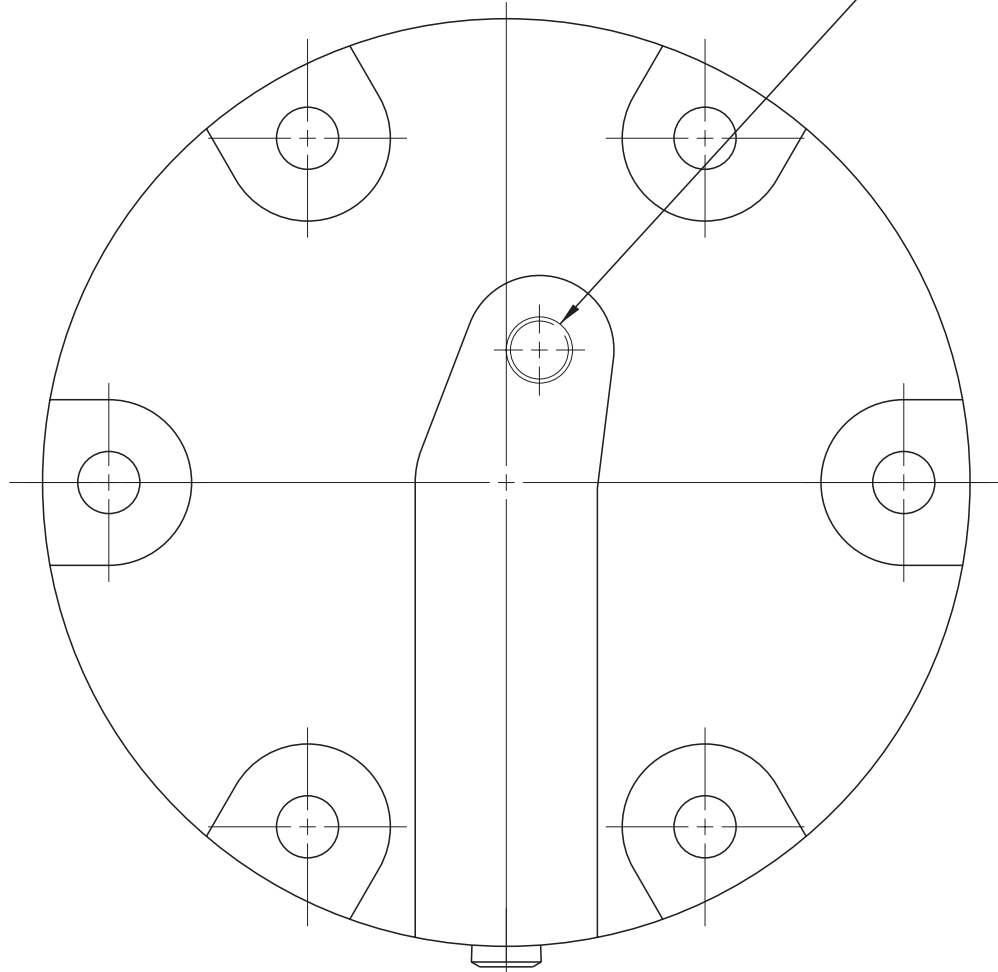

END VIEW OF METERING PUMP, ITEM 242

# BOLT TORQUE CHART

BOLT DIAMETER Inches	TORQUE lb-ft	TORQUE Nm
1/4	9	12
5/16	18	24
3/8	32	43
7/16	50	68
1/2	75	102
9/16	110	149
5/8	150	203
3/4	265	359
7/8	420	569
1	640	868
1 1/8	800	1085
1 1/4	1000	1356
1 3/8	1200	1627
1 1/2	1500	2034

**NOTE:** Unless otherwise specified, torque bolts per above chart.

